Overview of Functions and Codes (Alphabetical)

The table below lists all available functions as they appear on the display. Functions that have been configured (contact System Support) can be activated interactively (select + save) via the Program/Service menu (select + save or enter a code), or by pressing function keys, provided that the functions have been configured (contact System Support).

| Functions (display) | Inter- actively | Via the Program/Service menu Program/Service | | With function keys |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|-------------------------------------------------------|-----------------------------------|--------------------------|
| | | | Code | |
| Account code | | \checkmark | *60 | Х |
| Advisory msg. on Advisory msg. off | √ √ | √ √ | *69 #69 | X X |
| Associated dial | | \checkmark | *67 | Х |
| Associated serv. | | \checkmark | *83 | Х |
| Call waiting Waiting tone off Waiting tone on Call wait.term.on Call wait.trm.off | × × × | \checkmark | *55 *87 #87 *490 #490 | X X X X X |
| Caller List Save number | √ √ | \checkmark | #82 *82 | X X |
| Changeover on Changeover off Change PIN | * * | ✓ ✓ ✓ | *66 #66 *93 | X X |
| Conference Start conference Adding a party to the conference End conference View conf parties Remove party Drop last conf. party (only for U.S.) | * * * * | ✓ ✓ | *3 #3 *491 | X |
| Consult Return to held call Quit and return Transfer/US:Accept call UK:Accept | | \checkmark | *0 *0 | |
| Control Relay On Control Relay Off | | √ √ | *90 #90 | X X |
| US:Directory UK:Phonebook | ✓ | | | Х |
| DISA | | | | |
| Internal DISA | ✓ | √ | *47 | Х |
| En-bloc sending Dial | ~ | | | |

Overview of Functions and Codes (Alphabetical)

| Functions (display) | Inter- actively | Via the Program/Service menu Program/Service | | With function keys |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------|------------------------------------------------------|-------------------------------------------|
| | | $\bigcirc \bigcirc$ | Code | |
| DND on DND off | √ ✓ | √ √ | *97 #97 | X X |
| Door opener on Door opener off | | ✓ ✓ | *89 #89 | X X |
| DTMF dialing | | √ | * 53 | Х |
| Forwarding on 1=all calls 2=external calls only 3=internal calls only Forwarding off Trunk FWD on Trunk FWD out Forward Line: On Forward Line: Off | ✓ | | *1 *12 *13 #1 *64 #64 *501 #501 | X X X X X X X X X |
| Headset Answer call | ✓ | | | |
| HF answerback on HF answerback off | ✓ ✓ | ✓ ✓ | *96 #96 | X X |
| Hotline | | | | |
| Join hunt group Leave hunt group Rejoin all groups Leave all groups | * * * | ✓ ✓ ✓ ✓ | *85 #85 *85* #85# | X X X X |
| Lock all phones | | ✓ | *943 | Х |
| Monitoring | | | *944 | |
| Mute on Mute off | ✓ ✓ | √ √ | *52 #52 | X X |
| Night answer on Night answer off | ✓ ✓ | √ √ | *44 #44 | X X |
| Open door | | √ | *61 | Х |
| Override | ✓ | √ | *62 | Х |
| Page Answer page (not for U.S.) | | √ √ | *45 #45 | X X |

I

| Functions (display) | Inter- actively | Via the Program/Service menu Program/Service | | With function keys |
|----------------------------------------------------------------------------------------|-----------------------|-------------------------------------------------------|-------------------|--------------------------|
| | | | Code | |
| Park a call Retrieve call | | √ √ | *56 #56 | Х |
| Phone Test | | ✓ | *940 | |
| Pickup - directed Pickup - group Accept call | * * | √ √ | *59 *57 | X X |
| Prog. feature key | | ✓ | * 91 | Х |
| Redial | | | | Х |
| Reject call Release | | | | Х |
| Relocate Complete Relocate | ~ | √ | *9419 #9419 | Х |
| Reserve trunk | ✓ | | | Х |
| Reset services | | ✓ | #0 | Х |
| Retrieve line | | ✓ | *63 | Х |
| Ring Transfer: On Ring Transfer: Off | | √ √ | *502 #502 | X X |
| Ringer cutoff on Ringer cutoff off | ✓ ✓ | √ √ | *98 #98 | X X |
| Ringing group on Ringing group off | | √ √ | *81 #81 | X X |
| Room monitor | | √ | *88 | Х |
| Select language | | √ | *48 | |
| Send message View sent message US: View messages UK: Display Messages Mailbox | * * * | √ √ √ | *68 #68 #68 | X X X X |
| Keypad dialingl | | ✓ | *503 | |
| Shift Key | | | | Х |
| Show call charges (own telephone) View call charges (other party's telephone) | | √ | *65 | X X |
| Speaker call | | ✓ | *80 | Х |
| Suppress call ID Restore caller ID | * * | √ √ | *86 #86 | X X |
| Tel. data service | | | *42 | |
| Temporary MSN (not for U.S.) | ✓ | ✓ | *41 | Х |
| Temporary Phone | | \checkmark | *508 | Х |

1

Х

Overview of Functions and Codes (Alphabetical)

| Functions (display) | Inter- actively | Via the Program/Service menu Program/Service | | With function keys |
|----------------------------------------------------------------------------------------------------------------------------------|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|--------------------------------------|
| | $\bigcirc \bigcirc$ | $\bigcirc \triangleright$ | Code | |
| Timed reminder on Timed reminder off | | √ √ | *46 #46 | X X |
| Toggle/Connect | ✓ | √ | *2 | Х |
| Trace call | | √ | *84 | Х |
| Transfer | ✓ | | | |
| Trunk Flash | | √ | * 51 | Х |
| UCD Log on Log off Available Not available Work on Work off UCD night on UCD night off Calls in queue | | $ \begin{array}{c} \checkmark \\ \checkmark $ | *401 #401 *402 #402 *403 #403 *404 #404 *405 | X X X X X X X X |
| US:Callback UK:Set Callback View callbacks/Delete | ✓ ✓ | √ √ | *58 #58 | Х |
| Use speed-dialing Change Speed-dial (station) | | √ √ | *7 *92 | X X |