



**HiPath 3000**  
**HiPath AllServe**

**optiPoint 600 office**

Operating Instructions

**SIEMENS**

Global network of innovation

---

## Before You Begin

These operating instructions describe the optiPoint 600 office telephone on your HiPath 3000 / HiPath AllServe.

They describe all functions you can use from your telephone. You may find that some functions you wish to use are not available on your telephone. This may be due to one of the following reasons:

- The function has not been configured for your telephone – please contact your service personnel.
- Your communications platform does not support this function – please contact your service personnel.

## Important Notes

	Do not operate the telephone in environments where there is a danger of explosions.
	Use only original Siemens accessories → page 150. Using other accessories may cause a hazard and will invalidate the warranty and the CE mark.
	Never open the telephone or a key module. If you encounter any problems, ask the service personnel.

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products.

An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

Never allow the telephone to come into contact with staining or aggressive liquids such as coffee, tea, juice, or soft drinks.

For information on telephone maintenance → page 151.

## Marks



The device conforms to the EU guideline 1999/5/EG, as attested by the CE mark.



This device has been manufactured in accordance under a certified environmental management system (ISO 14001). This process ensures that energy consumption and the use of primary raw materials are kept to a minimum, thus reducing waste production.

<b>Basic Operating Instructions</b> .....	<b>10</b>
optiPoint 600 office Control Panel .....	10
How to Use these Operating Instructions .....	11
Screen Displays .....	12
Accessing Functions .....	12
... Interactively .....	12
... Via the Program/Service Menu .....	12
... With Function Keys .....	13
... Via the Large Graphics Display .....	13
Display with Touchscreen Functionality .....	14
Overview .....	14
Operating the Display .....	14
Display Menu .....	14
Functions You Can Use .....	16
Basic and Enhanced Functions .....	16
Additional Team and Executive/Secretary Functions .....	16
Local Applications .....	16
Using the Telephone Efficiently .....	17

## **Basic and Enhanced Functions**

<b>Making and Answering Calls</b> .....	<b>18</b>
Answering a Call with the Handset .....	18
Answering a Call with the Speaker (Speakerphone Mode) .....	18
Open Listening in the Room During a Call .....	19
Switching to Speakerphone Mode .....	20
Switching to the Handset .....	20
Using Call Waiting .....	20
Accepting a Waiting Call (Camp-On) .....	20
Preventing and Allowing Call Waiting (Automatic Camp-On) .....	21
Turning the Call Waiting Tone On and Off .....	22
Accepting a Specific Call for Your Colleague .....	22
Rejecting Calls .....	23
Using Mailboxes .....	23
Accessing the Mailbox .....	23
Using Timed Reminders .....	24
Using the Speakerphone .....	24
Enabling and Disabling Handsfree Answerback .....	25

Answering a Call With a Headset . . . . . 25  
Turning Do Not Disturb On and Off . . . . . 25  
Turning Ringer Cutoff On and Off . . . . . 26  
Trace Call: Identifying Anonymous Callers (Not for U.S.) . . . . . 26  
Turning the Microphone On and Off . . . . . 27  
Answering Calls from the Entrance Telephone and Opening the Door. 28  
Accepting a Call From an Answering Machine . . . . . 29  
Display Number of Waiting Calls and Overload Indication . . . . . 30

**Making Calls . . . . . 31**

Off-Hook Dialing . . . . . 31  
On-Hook Dialing. . . . . 31  
    En-Bloc Sending/Correcting Numbers . . . . . 32  
Caller ID Suppression . . . . . 33  
Talking to Your Colleague With a Speaker Call . . . . . 33  
Activating Tone Dialing (DTMF Suffix-Dialing) . . . . . 34  
Automatic Connection Setup (Hotline) . . . . . 34  
Reserve Trunk . . . . . 35  
Assigning a Station Number (Not for U.S.) . . . . . 35  
Trunk Flash . . . . . 36  
Associated Dialing/Dialing Aid . . . . . 37

**Calling Multiple Parties Simultaneously . . . . . 38**

Calling a Second Party (Consultation Hold) . . . . . 38  
    Switching to the Party on Hold (Toggle) . . . . . 38  
Conducting a Conference . . . . . 39  
    Adding up to Five Parties to the Conference (Initiator Only) . . . . . 39  
    Checking which Parties are in the Conference (Initiator Only). . . . . 40  
    Removing Parties from the Conference (Initiator Only) . . . . . 40  
    Leaving a Conference . . . . . 40  
    Ending a Conference (Initiator Only) . . . . . 40  
    Removing the ISDN Central Office Party  
    From the Conference (Only for U.S.) . . . . . 41  
Transferring a Call . . . . . 41  
    ...After a Speaker Call (Announcement) in a Group . . . . . 41  
Parking a Call . . . . . 43  
    Retrieving a Parked Call . . . . . 43  
Placing External Calls on Hold . . . . . 44  
    Picking up (Retrieving) a Held Call . . . . . 44

**Making Calls to Stored Destinations .....45**

Redialing a Number ..... 45

Using a Caller List ..... 45

    Retrieving the Caller List ..... 46

    Checking the Call Time/Additional Call Information ..... 47

    Dialing a Station Number from the Caller List ..... 47

    Removing an Entry from the Caller List ..... 48

    Saving the Other Party’s Station Number  
    in the Caller List (Redial) ..... 48

Dialing from the Internal Directory ..... 49

Dialing from the Personal Directory ..... 51

Dialing from the Corporate Directory ..... 53

Using Repertory Dialing Keys ..... 55

Using Station and System Speed-Dial Numbers ..... 55

**Displaying and Assigning Call Charges .....56**

Displaying Call Charges (Not for U.S.) ..... 56

Displaying Call Charges for Another Telephone (Not for U.S.) ..... 57

Dialing with Call Charge Assignment ..... 58

**If You Cannot Reach a Destination .....59**

Using Callback ..... 59

    Storing a Callback ..... 59

    Answering a Callback ..... 59

    Checking and Canceling a Saved Callback ..... 59

Call Waiting (Camp-On) ..... 60

Busy Override - Joining a Call in Progress ..... 61

**Telephone Settings .....62**

Adjusting the Ring Volume ..... 62

Adjusting the Ring Tone ..... 62

Adjusting the Attention Ring Volume ..... 63

Adjusting the Speakerphone to the Room Acoustics ..... 63

Selecting the Language of Screen Prompts ..... 64

Display Illumination ..... 64

Adjusting the Display to a Comfortable Reading Angle ..... 64

Locking the Telephone to Prevent Unauthorized Use ..... 65

Saving Your PIN ..... 66

**Saving Station Numbers, Functions, Procedures and Appointments .....67**

Saving Repertory Dialing Numbers on a Key..... 67  
Storing Station Speed-Dial Numbers..... 68  
Assigning Functions to Keys..... 69  
Assigning a Procedure (Operating Steps) to a Key..... 72  
Saving Appointments..... 74

**Testing the Telephone.....75**

Testing the Telephone Functions..... 75  
Checking the Key Assignments..... 76

**Call Forwarding .....77**

Using Variable Call Forwarding..... 77  
Using Night Answer..... 78  
Call Forwarding in the Carrier Network  
and Forwarding Multiple Subscriber Numbers (MSN) (Not for U.S.)... 79

**Using Other Functions.....80**

Sending a Message..... 80  
    Creating and Sending a Message..... 80  
    Deleting/Displaying the Message Sent..... 82  
    Answering Messages..... 82  
Leaving an Advisory Message..... 83  
    Deleting Advisory Messages..... 83  
Using Another Telephone Like Your Own..... 84  
Change Call Number (Relocate)..... 85  
Fax Details and Message on Answering Machine..... 86  
Resetting Services and Functions  
(System-Wide Cancellation for a Telephone)..... 86  
Silent Monitor (U<sub>P0/E</sub> only)..... 87  
Monitoring a Room..... 87  
Activating Functions for Another Telephone..... 88  
Locking Another Telephone to Prevent Unauthorized Use..... 89  
Using System Functions from the Outside  
(DISA: Direct Inward System Access)..... 89  
Using Functions in ISDN via Code Dialing (Keypad Dialing)..... 91  
Controlling Connected Computers or Other  
Programs and Telephone Data Service  
(HiPath 3500/3550/3700/3750 Only)..... 92

Controlling Relays . . . . .	93
Sensors (HiPath 3300/3350/3500/3550 Only) . . . . .	93
Radio Paging (Not for U.S.) . . . . .	94
Simple Paging Equipment . . . . .	94
Enhanced Paging Equipment (Hipath 3700/3750 Only) . . . . .	94

 **Team and Executive/Secretary Functions**

**Team and Executive/Secretary Functions with Trunk Keys . . . . . 96**

Using Trunk Keys. . . . .	96
Answering Calls with Trunk Keys . . . . .	97
Making Calls with Trunk Keys . . . . .	97
Using a Trunk Key to Place a Call on Hold and Retrieve it Again . . . . .	97
Switching Between Phone Calls on Multiple Trunks. . . . .	98
Forwarding Calls on Lines . . . . .	99
Using DSS Keys. . . . .	101
Using DSS Keys to Answer Calls. . . . .	101
Calling a Team Member Directly . . . . .	101
Transferring a Call in Progress. . . . .	102
Accepting a Call for Another Team Member. . . . .	102
Joining or Leaving a Group Call (Not for the Executive Telephone in an Executive/Secretary Team) . . . . .	102
Transferring Calls Directly to the Executive (Only in an Executive/Secretary Group) . . . . .	103

**Using Other Team Functions . . . . . 104**

Turning Group Call On and Off . . . . .	104
Accepting a Call for Another Member of Your Team . . . . .	106
Activating and Deactivating a Ringing Group. . . . .	106
Uniform Call Distribution (UCD). . . . .	108

↓ **Local applications**

**Using Local Applications . . . . .110**

- Entering Characters . . . . . 110
  - Touchscreen Keypad . . . . . 110
  - Entering Characters via the Keypad . . . . . 112
  - External Keyboard . . . . . 113
- Personal Directory . . . . . 114
  - Creating a New Entry . . . . . 115
  - Selecting/Finding an Entry to be Modified or Deleted . . . . . 117
  - Editing/Deleting/Changing an Entry . . . . . 119
  - Displaying an Entry . . . . . 122
  - Displaying the Number of Existing Entries . . . . . 123
  - Deleting all Entries . . . . . 123
  - Importing or Exporting a Personal Directory via USB . . . . . 124
  - Importing/Exporting the Personal Directory via LAN . . . . . 125
  - Changing Captions . . . . . 127
- Corporate Directory . . . . . 129
  - Advanced Search . . . . . 130
- WAP Browser . . . . . 134
- Local Settings . . . . . 136
  - Adjusting the Display Contrast . . . . . 136
  - Calibrating the Touchscreen . . . . . 137
  - Selecting your Operating Language . . . . . 138
  - Selecting a Language for the External Keyboard . . . . . 139
  - Changing the Display Reset Time . . . . . 139
  - Setting a Password for Personal Options . . . . . 140
  - Setting Web Access Parameters . . . . . 141

↓ **System networking via LAN (PC network)**

**Special Function in the LAN (PC Network) . . . . .142**

- Leaving a Hunt Group/Group Call . . . . . 142
- Transferring Call Forwarding . . . . . 143
- Using Night Answer . . . . . 144
- Activating and Deactivating a Ringing Group . . . . . 145
- Controlling Relays . . . . . 146
- Opening the Door . . . . . 147

↓ **All About Your Telephone**

**Labeling, Documentation and Accessories . . . . . 148**

Labeling Key Fields . . . . . 148  
 Attaching a Station Number Label. . . . . 149  
 Documentation . . . . . 149  
 Accessories . . . . . 150


**Fixing Problems . . . . . 151**

Telephone Maintenance . . . . . 151  
 Troubleshooting. . . . . 151  
 Responding to Error Messages on the Screen . . . . . 152  
     Restart the Telephone . . . . . 153  
 Contacts for Resolving Problems . . . . . 153

**Index . . . . . 154**

# Basic Operating Instructions

## optiPoint 600 office Control Panel

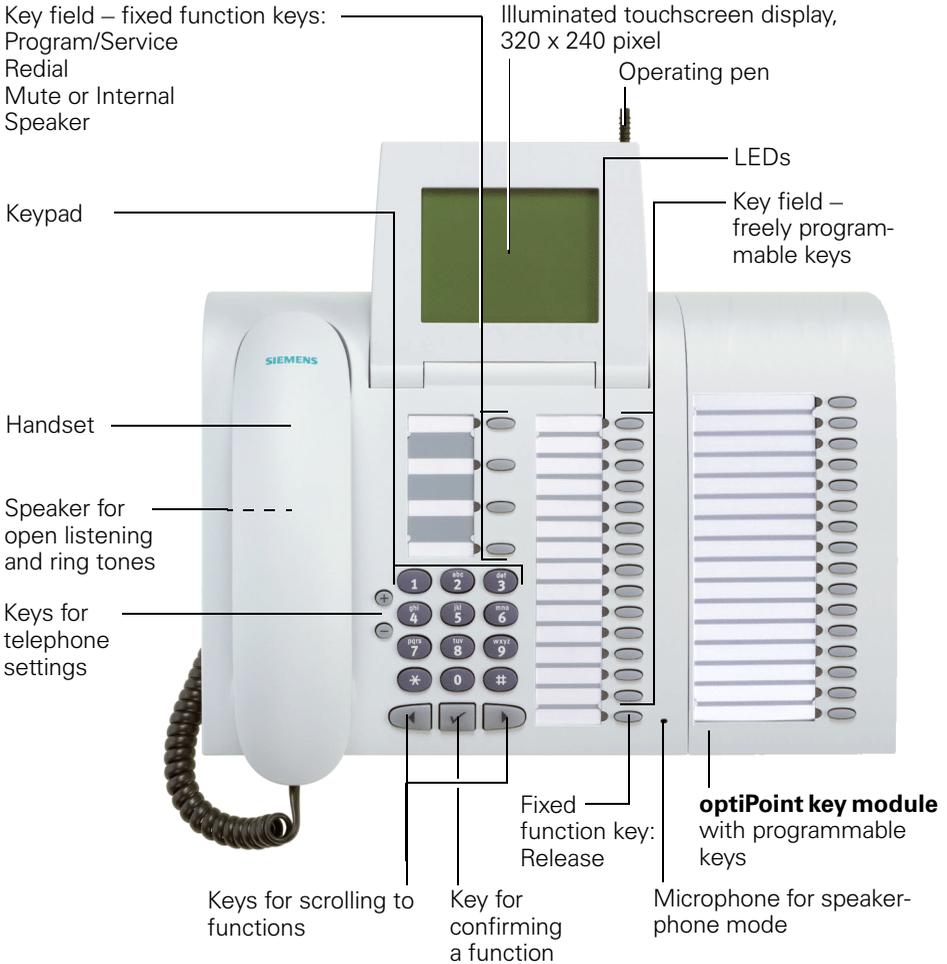

Step by Step

## How to Use these Operating Instructions

You will find a graphic representation of the steps in logical sequence in the left column. Below is an explanation of the symbols:



Lift the handset (off-hook).



Replace the handset (on-hook).



Conduct a call.



Enter a telephone number or code.



Enter the code.



Enter letters or numbers.

Via the keypad on the display → page 110,  
via the keypad → page 112,  
via the external keyboard → page 113



Click on the menu item or the softkey on the display.



Press volume controls on the telephone.



Press the key.



Press the illuminated key.



Press the flashing key.



The option appears on the screen.

Press the  key to confirm your selection.




Search for an option.

Press the   keys,

until the option appears on the screen.

Then press the  key to confirm your selection.

## Step by Step

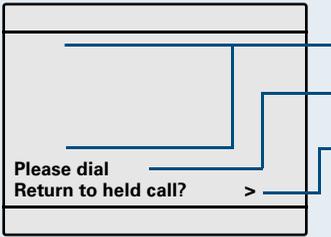

### Screen Displays

The graphics-enabled touchscreen display shows:

- Data from the internal telephone directory → page 49 or the caller list → page 45
- Requests and acknowledgement messages, depending on the situation
- Selection options for functions that you can confirm with . If you see the symbol ">" at the right, further options are available and can be accessed with the   keys
- Touchscreen controls (softkeys) in local applications → page 110

For more information on the display see → page 14.

### Accessing Functions

#### ... Interactively

You can select some function **while the telephone is idle**, for example:



Use   to scroll to a function and press  to execute it.



You can select other functions **directly depending on the situation**. Example: You call a number, but the line is busy:

Press  to confirm.



Use   to scroll to a function and press  to execute it.

#### ... Via the Program/Service Menu

First press the "Program/Service" key. You then see a list of selection options, such as: "#0=Reset services" → page 33.



Press the key.



Use   to scroll to a function and press  to execute it.

or

## Step by Step



Enter the code directly.

The Quick-Reference Operating Instructions contain a list of codes. However, they are also displayed on screen along with the corresponding function.

### ... With Function Keys

If you saved a function on a key → page 69, you can access it directly as follows :



Press the Mute key to execute the function

### ... Via the Large Graphics Display


In addition to situation-dependent functions, optiPoint 600 office also lets you use and access local applications, such as the personal telephone directory, via the large graphics-enabled display with its touch-screen functionality. See Display menu → page 14.

## Display with Touchscreen Functionality

In addition to situation-dependent functions, you can also use and access local applications in optiPoint 600 office, such as the personal telephone directory, for example, via the large graphics-enabled display with touchscreen functionality.

### Overview

Display interface fields:

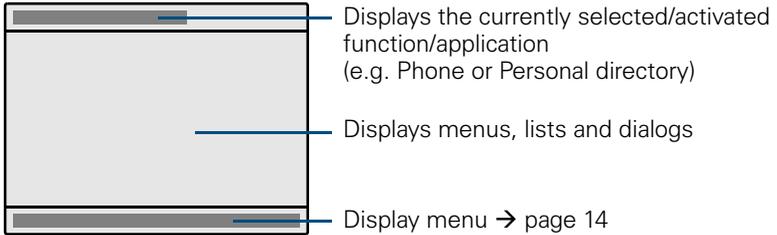


### Operating the Display

optiPoint 600 office comes complete with a plastic operating pen, with which you can select display interface functions ("click") or scroll between graphic contents ("drag") by pressing lightly on the nib.

Alternatively, you can use similar objects that will not damage the display interface. Finger (finger nail) activation is also possible.

### Display Menu

A number of functions can be activated in the lower field of the display.

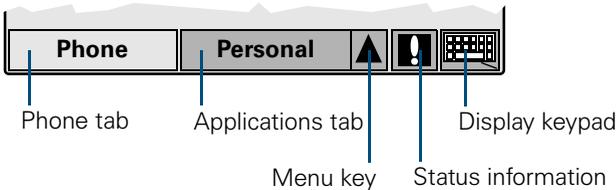

The **Phone tab** provides situation-dependent information on the idle or talk state of your optiPoint 600 office from the communication platform → page 12.



When a local application is displayed, such as the personal telephone directory for example, the "Phone" tab flashes to signal incoming calls in addition to the ring tone.

When you pick up the handset to dial or accept an incoming call, the display indicator automatically switches to the "Phone" tab.

If configured, switching is performed automatically even if there is no user intervention for a lengthy period (time can be configured, → page 139).

---

The **Applications tab** contains local applications, such as:

- **Personal:** personal telephone directory → page 114
- **Corporate:** corporate telephone directory → page 129
- **Web access:** WAP browser → page 134
- **Service:** the service menu for settings → page 136

The **Menu key** opens up the menu selection option where one of the local applications can be activated and the "Applications" tab can be quickly accessed.

If the **Status information** softkey is displayed, system messages have been received (flashing light = unread messages). Click on the question mark to read the message(s).

Using the **Display keypad** softkey, you can enter characters via the display (→ page 110).

---



The current displays in the "Phone" tab and in the individual local applications are mutually independent.

This means that if you are in the personal directory, for example, and the display changes to "Phone" because you have accepted an incoming call, the same display that was active before you accepted the call reappears when you change back to the personal directory.

Descriptions of local applications → page 110 always assume that the status of the relevant application is idle. If the status is unspecified when the application is activated, press "Cancel", "Exit", or "Menu", until the relevant idle status appears.

---

## Functions You Can Use

### Basic and Enhanced Functions

You can use all basic and enhanced communications platform functions that appear interactively on the screen, in the Program/Service menu, and when you press function keys.

### Additional Team and Executive/Secretary Functions

→ page 96f.

To help working and project groups work together more efficiently, the service personnel can configure a variety of team functions, depending on your preferences when working in the team. You can use these team functions in addition to the basic and enhanced functions.

In addition to call pickup, hunting groups (group call), and call distribution groups, you can also set up teams with multiple lines per telephone.

You can tell if a telephone has trunk keys if your station number and the numbers of your colleagues are programmed on trunk keys. You can access all lines and can also conduct different calls simultaneously on multiple lines.

Another team function category includes the executive/secretary functions, which are configured by the service personnel. You can use executive and secretary functions in addition to the basic and enhanced functions as well as other team functions.

An executive/secretary telephone has DSS keys for the executive or secretary, trunk keys for the executive and secretary, as well as ring transfer keys.

### Local Applications

Your optiPoint 600 office not only lets you use the functions of your communication platform, but also gives you a high degree of flexibility with its integrated local applications → page 110,:

- The personal directory for up to 320 entries (numbers, names, additional information, etc.) → page 114
- User-friendly options for searching and dialing from a LAN server's corporate directory → page 129
- A WAP browser for accessing information on your intranet → page 134
- A menu with a wide variety of options for locally configuring your optiPoint 600 office → page 136

## Using the Telephone Efficiently

- You probably have certain colleagues or external parties with whom you talk on the phone especially frequently. To dial these numbers faster and more conveniently, you can save them on keys (Saving station numbers for repertory dialing on keys → page 67).
- You can save additional names, station numbers, and calling party data in the personal directory of your optiPoint 600 office telephone → page 114. A well maintained directory will save a great deal of effort in searching for lost phone numbers.
- All too often you reach a busy line when dialing a number. Amid the confusion of your working day, it's easy to forget to try the number again later on. To avoid this, make it a habit to use the "Callback" → page 59 function.

Step by Step

## Making and Answering Calls

Special default ring signaling is set for your telephone:

- When you receive an internal call, your telephone rings once every four seconds (single-tone sequence).
- When you receive an external call, your telephone rings twice in rapid succession every four seconds (dual-tone sequence).
- When you receive a call from the entrance telephone, your telephone rings three times in rapid succession every four seconds (triple-tone sequence).
- If a call is waiting, you hear a short tone (beep) every six seconds.

The number or the name of the caller appears on the display.

### Answering a Call with the Handset

The telephone rings. The caller appears on the screen.



Lift the handset.

#### Ending the call:



Replace the handset.


or



Press the key.

### Answering a Call with the Speaker (Speakerphone Mode)

The telephone rings. The caller appears on the screen.

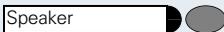


Press the key. The LED lights up. Speakerphone mode.



Raise or lower the volume. Keep pressing the key until the desired volume is set.

## Step by Step

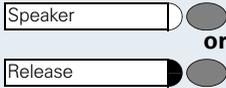

### Ending the call:

Press the key. The LED goes out.

Press the key.

### Notes on speakerphone mode:

- Tell the other party that you are using speakerphone mode.
- The speakerphone works best at a low receiving volume.
- The ideal distance between the user and the telephone set in speakerphone mode is about 50 cm (approx. 20 inches).

## Open Listening in the Room During a Call

You can let other people in the room join in on the call. Let the other party know that you have turned on the speaker.

**Precondition:** You are conducting a call with the handset.

### Activating ring transfer:



Press the key. The LED lights up.

### Deactivating this function:



Press the key. The LED goes out.

## Step by Step

Speaker



### Switching to Speakerphone Mode

**Precondition:** You are conducting a call with the handset.

Hold down the key and replace the handset. (In U.S. press the key once and replace the handset). Then release the key and continue the call.

### Switching to the Handset

**Precondition:** You are engaged in a call in speakerphone mode.

Lift the handset. Continue the call.

### Using Call Waiting

Callers can still reach you while you are engaged in another call. A signal alerts you to the waiting call. You can either ignore or accept the waiting call. When you accept the waiting call, you can either end the first call or place it on hold and resume the call later on.

You can also bar call waiting or the call waiting tone → page 21.

### Accepting a Waiting Call (Camp-On)

**Precondition:** You are engaged in a phone call and hear a tone (every six seconds).

#### Ending the first call and answering the waiting call:



Replace the handset. Your telephone rings.



Answer the second call. Lift the handset.

## Step by Step

▶  ✓

Select and confirm.

or

Press the key. The LED lights up. Enter the code.

\* 5 5

You are connected to the call waiting party immediately. The first party is placed on hold.

✓

Confirm.

or

\* 0

Press the key. The LED lights up. Enter the code.

or



Replace the handset. "Recall: ..." appears on the screen. Lift the handset.

## Preventing and Allowing Call Waiting (Automatic Camp-On)

If this function has been configured (ask the service personnel), you prevent or allow a second call → page 20 from being signaled by automatic camp-on during an ongoing call.

Press the key. The LED lights up

and

▶  ✓

Select and confirm.

or

▶  ✓

or

4 9 0 or  \* 4 9 0

Enter the code for "off" or "on".

## Step by Step

▶  ✓

or

▶  ✓

or

 8 7 or  \* 8 7

### Turning the Call Waiting Tone On and Off

You can suppress the call waiting tone (every six seconds) for external calls. A one-time special dial tone then alerts you to the waiting call.

Select and confirm.

Enter code for "tone off" or "tone on".

### Accepting a Specific Call for Your Colleague

You hear another telephone ring.



Press the key. The LED lights up

▶  ✓

or

 \* 5 9

Select and confirm.

Enter the code.

All called stations appear on the screen.

▶  ✓

Select the station whose call you want to answer (the cursor appears as a black square at the beginning of the line).

✓

or



Confirm.

If you know the number of the telephone that is ringing, enter it directly.

or



Press the flashing key.


 Accepting calls in a team → page 106.

## Step by Step

### Rejecting Calls

You can reject calls which you do not wish to take. The call is then signaled at another definable telephone (contact your service personnel).

The telephone rings. The caller is displayed.

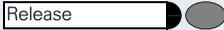


Press the key.

If a call cannot be rejected, your telephone will continue to ring. The message "currently not possible" (UK) or "Feature not available" (US) is displayed (e.g in the case of recalls).

### Using Mailboxes


If you have programmed the "Mailbox" key → page 69, the associated LED lights up when messages have arrived for you. If your telephone is connected to a voice mail system, the "Mailbox" key will also light up to alert you to any messages that have arrived.

### Accessing the Mailbox

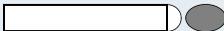


Press the illuminated "Mailbox" key.

or

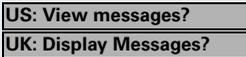


Confirm.

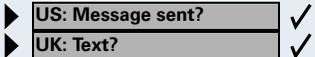

Select and confirm.

or

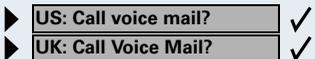

Follow the user prompts.

## Step by Step

US: Reminder:

UK: Reminder at:

Speaker



## Using Timed Reminders

**Precondition:** You must have saved a timed reminder → page 74. The current time is the time stored.

The telephone rings. The timed reminder appears on the screen.

Press the key twice.

Lift the handset and replace it again.



If you fail to answer the timed reminder, it repeats five times and is then erased.

## Using the Speakerphone

A colleague addresses you directly over the speaker with a speaker call. You hear a tone before the announcement. The other party's name or station number appears on the screen.

You can conduct the call with the handset or in speakerphone mode.

Lift the handset and answer the call.

Press the "OK" key to confirm your selection and answer the call.

Press the key and answer the call.



If handsfree answerback is enabled (see below), you do not need to switch on the microphone - you can answer directly. You can answer immediately in speakerphone mode.

If handsfree answerback is disabled (default setting), follow the procedure described above.

Placing a speaker call to a colleague → page 33.

Mute off?



or



Mute


or



## Step by Step

- ▶  ✓
- ▶  ✓

or

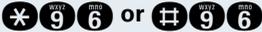

Select and confirm.

Enter the code for "on" or "off".

- ✓

Your telephone rings. Confirm.



### Ending the call:

Press the key. The LED goes out.

- ▶  ✓
- ▶  ✓

or



Select and confirm.

Enter the code for "on" or "off".

 When you lift the handset, a special dial tone (continuous buzzing tone) reminds you that do not disturb is active.

Authorized internal callers can automatically override the do not disturb function after five seconds.



Step by Step

▶ Ringer cutoff on? ✓  
or  
▶ Ringer cutoff off? ✓  
or

\* 9 8 or # 9 8

### Turning Ringer Cutoff On and Off

You can activate the ringer cutoff function if you do not want the receive any calls. Calls are only identified by **one** ring signal, an indication on the display, and a key which has been programmed to flash (such as a trunk key).

Select and confirm.

Enter the code for "on" or "off".

### Trace Call: Identifying Anonymous Callers (Not for U.S.)

You can have the carrier identify malicious external callers. You can save the caller's station number during the call or for 30 seconds after the call ends. However, it is essential that you do not replace your handset during this time.

Program/Service ●

and

▶ \*84=Trace call? ✓  
or

\* 8 4

Press the key. The LED lights up.

Select and confirm.

Enter the code.



After you have finished tracing the call, the data is stored on the carrier's system. Now contact your service personnel.

Step by Step

## Turning the Microphone On and Off

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the handsfree microphone. You can also switch on the handsfree microphone to answer an announcement via the telephone speaker (speaker call, → page 24).

**Precondition:** You are conducting a call. The microphone is switched on.




Press the key. The LED lights up.




Press the illuminated key. The LED goes out.

or

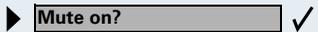

Select and confirm.


or

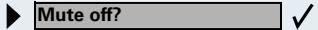

or



Press the key. The LED lights up

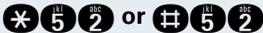

Enter the code for "on" or "off".

Step by Step

## Answering Calls from the Entrance Telephone and Opening the Door

If an entrance telephone has been programmed, you can use your telephone to speak to someone at the entrance telephone and to activate a door opener. If you have the proper authorization (contact your service personnel), you can activate the **door opener**, enabling visitors to open the door themselves by entering a 5-digit code (using a DTMF transmitter or installed keypad).

### Speaking to visitors via the entrance telephone:

**Precondition:** Your telephone rings.



Lift the handset within thirty seconds. You are connected to the entrance telephone immediately.

or



Lift the handset after more than thirty seconds.



Dial the entrance telephone number.

### Opening the door from your telephone during a call from the entrance telephone:

Open door? ✓

Confirm.

### Opening the door from your telephone without calling the entrance telephone:

Program/Service ●

Press the key. The LED lights up

▶ \*61=Open door? ✓

Select and confirm.

or

\* 6 1

Enter the code.



Dial the entrance telephone number.



Special features must be taken into consideration if your telephone operates with HiPath AllServe (system networking via PC network) → page 147!

## Step by Step



### Opening the door with a code (at the door):

After ringing the bell, enter the five-digit code (using the keypad or a DTMF transmitter). Depending on how the door opener has been programmed, a doorbell call signal may or may not be forwarded.

### Activating the door opener:

Program/Service

Press the key. The LED lights up

▶ **\*89=Door opener on?** ✓  
or

Select and confirm.



Enter the code.



Dial the entrance telephone number.



Enter the five-digit code. Default code = "00000".

▶ **3=change password?** ✓

Select the displayed function and press the "OK" dialog key to change the code.

▶ **1=enable with ring?** ✓

Select and confirm.

or

▶ **2=enable w/o ring?** ✓

You can also open the door without a doorbell ring.

### Deactivating the door opener:

Program/Service

Press the key. The LED lights up

▶ **#89=Door opener off?** ✓  
or

Select and confirm.



Enter the code.

## Accepting a Call From an Answering Machine


You can accept a call from any answering machine if the machine is connected to your system (contact your service personnel) and you have programmed the answering machine number on a key → page 69.

The LED lights up. Press the key.

### Step by Step

## Display Number of Waiting Calls and Overload Indication

You can show the number of external waiting calls on the display by pressing the "View number of calls" key → page 69.

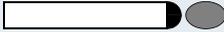

Press the "Waiting calls" key.

If the number of waiting calls exceeds a preset limit while you are engaged in another call (overload), the LED on the key lights up. Contact your service personnel to find out the waiting call limit.

- LED off:  
No callers waiting.
- LED flashes slowly:  
You have reached the programmed threshold.
- LED flashes rapidly:  
You have exceeded the threshold value (overload).

Step by Step

## Making Calls

### Off-Hook Dialing



Lift the handset.



Internal calls: Enter the station number.  
External calls: Enter the external code and the station number.

#### The called party does not answer or is busy:



Replace the handset.

### On-Hook Dialing



Internal calls: Enter the station number.  
External calls: Enter the external code and the station number.

#### The other party answers with speaker:



Lift the handset.

or

On-hook: Use speakerphone mode.

#### The called party does not answer or is busy:



Press the key. The LED goes out.



Your system may also be programmed so that you have to press the Internal key before you dial an internal number.  
To call an external party, you have to enter an external code before dialing the party's telephone number (Prime Line is not active; contact your service personnel).

## Step by Step

### En-Bloc Sending/Correcting Numbers

If this feature is configured (contact your service personnel), a connection is not attempted immediately when a station number is entered. This means that you can correct the number if necessary. The station number is only dialed at your specific request.



Internal: enter station number.  
External: enter external code and station number.

#### Dialing entered/displayed numbers:



Lift the handset.

or

Dial? ✓

Confirm.

#### Correcting numbers entered:



Select and confirm.  
The last digit entered in each case is deleted.



Enter the required digit(s).

#### Canceling en-bloc sending:



Select and confirm.

or



Press the key. The LED goes out.

or



Press the key.

Step by Step

▶ **Suppress call ID?** ✓

or

▶ **Restore caller ID?** ✓

or

**\*86** or **#86**

## Caller ID Suppression

You can prevent your station number or name from appearing on the displays of external parties you call. The feature remains active until you deactivate it.

Select and confirm.

Enter code for "suppress" or "restore".



Service personnel can turn caller ID suppression on and off for all telephones.

Program/Service

Press the key. The LED lights up.

▶ **\*80=Speaker call?** ✓

or

**\*80**

Enter the code.



Enter the station number.



Responding to a speaker call → page 24.

## Talking to Your Colleague With a Speaker Call

You can make a loudspeaker announcement through a loudspeaker if connected (ask the service personnel), or to an internal user with an system telephone without any action on their part.

## Step by Step

### Activating Tone Dialing (DTMF Suffix-Dialing)

You can transmit dual-tone multifrequency (**DTMF**) signals to control devices such as an answering machine or automatic information system.

Program/Service 

Press the key. The LED lights up.

▶ **\*53=DTMF dialing?** ✓

Select and confirm.

or



Enter the code.



You can use the keys "0" through "9", "\*", and "#" to transmit DTMF signals.



Ending the call also deactivates DTMF suffix-dialing.

Your system may be configured so that you can start DTMF suffix dialing immediately after setting up a connection.

### Automatic Connection Setup (Hotline)

If this function is configured (contact your service personnel), the system automatically sets up a connection to a preset internal or external destination.



Lift the handset.

Depending on the setting, the connection is either set up **immediately** or only **after** a preset **period of time** (hotline after a timeout).

Step by Step

## Reserve Trunk

If this feature is configured (contact your service personnel), you can reserve a busy trunk for your own use. When the trunk is free, you receive a call and a message appears on the display.

**Precondition:** The message "US:Currently busy UK:busy at the moment" appears on your screen.



Confirm.

### When the reserved trunk becomes free:

Your telephone rings. The display shows "Trunk is free".



Lift the handset. You hear the CO dial tone.


Enter the number of the external station.

## Assigning a Station Number (Not for U.S.)

If this function has been configured (contact your service personnel), you can selectively assign a specific number (DID number) to your telephone before making an external call. The assigned number then appears on the called party's display.



Press the key. The LED lights up

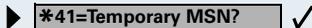

Select and confirm.

or



Enter the code.



Enter the DID number you wish to use.




Dial the external number.

Step by Step

### Trunk Flash

To activate ISDN-type services and features through the network carrier's analog trunks or those of other communication platforms (such as "consultation hold"), you must send a signal to the trunks before dialing the service code or telephone number.

**Precondition:** You have set up an external connection.

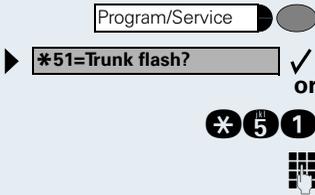

Press the key. The LED lights up.

Select and confirm.

Enter the code.

Enter the service code and/or telephone number.

Step by Step

## Associated Dialing/Dialing Aid

If this function has been configured (contact your service personnel), you can use a dialing aid to dial numbers and set up calls for your telephone.

The operating procedure depends on whether the dialing aid is connected to the **S<sub>0</sub> bus** or the **a/b (T/R) port**.

You can also use your system telephone as a dialing aid for other telephones.

### Dialing aid on the S<sub>0</sub> bus:

On the PC, select a destination and start dialing.



The speaker on your telephone is switched on. Lift the handset when the other party answers.

### Dialing aid at the a/b (T/R) port:

On the PC select a destination and start dialing.

"Lift the handset" appears on the PC screen.



Lift the handset.

### Dialing aid from your telephone for another telephone:



Press the key. The LED lights up



Select and confirm.



Enter the code.



Enter the internal station number ("Dial for:").



Enter the number you wish to dial.

## Step by Step

# Calling Multiple Parties Simultaneously

## Calling a Second Party (Consultation Hold)

You can call a second party while engaged in a call. The first party is placed on hold.

US: Consult? ✓  
UK: Enquiry? ✓



Call the second party.

### Return to the first party:

Return to held call? ✓



or

Quit and return? ✓



or

Program/Service \* 0

Press the key. The LED lights up. Enter the code. The LED goes out.

## Switching to the Party on Hold (Toggle)

▶ Toggle/Connect? ✓



or

Program/Service \* 2

Press the key. The LED lights up. Enter the code. The LED goes out.

## Step by Step

▶ **Conference?** ✓  
or

Program/Service  \* 

### Combine the calling parties into a three-party conference

Select and confirm.

Press the key. The LED lights up. Enter the code. The LED goes out.

▶ **Transfer?** ✓

### Connecting the other parties to each other

Select and confirm.

## Conducting a Conference

In a conference call, you can talk to as many as four other parties at the same time. These may be internal or external users.

▶ **Start conference?** ✓



Call the first party.

Select and confirm.



Call the second station. Announce the conference.

▶ **Conference?** ✓  
or

Program/Service  \* 

Select and confirm.

Press the key. The LED lights up. Enter the code. The LED goes out.

A tone sounds every 30 seconds to indicate that a conference is in progress. Contact your service personnel for instructions on how to turn it off.

**Return to held call?** ✓

or

\* 

### If the second party does not answer:

Confirm.

Enter the code.

**Add party?** ✓



### Adding up to Five Parties to the Conference (Initiator Only)

Confirm.

Call the new party. Announce the conference.

## Step by Step

▶ **Conference?** ✓  
or

Program/Service   

Select and confirm.

Press the key. The LED lights up. Enter the code. The LED goes out.

### Checking which Parties are in the Conference (Initiator Only)

▶ **View conf parties?** ✓

Select and confirm.  
The stations appear on the screen.

▶ **Exit list?** ✓

Close the list: Select and confirm.

### Removing Parties from the Conference (Initiator Only)

▶ **View conf parties?** ✓

Select and confirm.  
The stations appear on the screen.

  or  

Click on softkeys or press keys to select the relevant parties (square at the start of the line).

▶ **Remove party?** ✓

Select and confirm.

### Leaving a Conference

  
or

Replace the handset.

▶ **US: Leave conference?** ✓

Select and confirm.

▶ **UK: Withdraw?** ✓

Select and confirm.

### Ending a Conference (Initiator Only)

▶ **End conference?** ✓

Select and confirm.

or

Program/Service   

Press the key. The LED lights up. Enter the code. The LED goes out.


## Step by Step



### Removing the ISDN Central Office Party From the Conference (Only for U.S.)

Select and confirm.

Press the key. The LED lights up. Enter the code. The LED goes out.

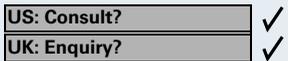

Press the "OK" dialog key to confirm your selection




Enter the number of the party to which you want to transfer the call.



Announce the call, if necessary.



Replace the handset.

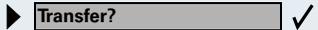


Select and confirm.

### ...After a Speaker Call (Announcement) in a Group


If this function has been configured (contact your service personnel), you can use a speaker call (announcement, → page 33) to announce a call in progress to a group of users → page 104.

After a member of the group has accepted the call request, you can transfer the waiting party.


**Precondition:** You are conducting a call.

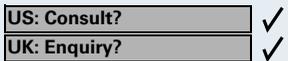

Confirm. The other party is placed on hold.

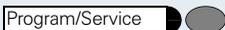

Press the key. The LED lights up

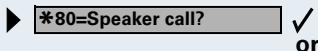

Select and confirm.



Enter the code.

### Step by Step



Enter the group's station number.



Announce the call.

When a member of the group accepts the call  
→ page 24, you are connected to this party.



Replace the handset.

or



Select and confirm.



Transfer?



If the connection between the two other parties is not established within 45 seconds, the call from the first part returns to you (recall).

---

## Step by Step

### Parking a Call

You can park up to ten calls, either internal, external, or both. Parked calls can be displayed on and picked up from another telephone. This feature is useful if you want to continue a call at another phone.

**Precondition:** You are conducting a call.

Program/Service 

Press the key. The LED lights up

▶ **\*56=Park a call?** ✓  
or

Select and confirm.

Enter the code.

 ... 

Enter the number of the park slot (0 - 9) and make a note of it. If the park slot number you entered is not displayed, it is already in use; enter another one.

### Retrieving a Parked Call

**Precondition:** One or more calls have been parked. The telephone is idle.

Program/Service 

Press the key. The LED lights up

▶ **Retrieve call?** ✓  
or

Select and confirm.

Enter the code.

 ... 

Enter the park slot number you noted earlier. If the park slot number you enter is not in use, you cannot retrieve the call.



If a parked call is not picked up, after a specific period of time the call is returned to the telephone from where it was parked (recall).

## Step by Step

### Placing External Calls on Hold

If you have programmed a key on your telephone as a hold key → page 69, you can place external calls on hold.

This enables all other parties to retrieve the call on the assigned line.



Held on line: 801

Press the "US:Hold UK:Common Hold" key.

A message appears showing which line is on hold (e.g. 801); make a note of the line number.

If a trunk key has been assigned, the LED flashes slowly.

#### If necessary



Replace the handset or press the key.


Depending on your system configuration, this may be necessary so other users can also pick up the held call.

### Picking up (Retrieving) a Held Call

**Precondition:** One or more calls have been parked. The telephone is idle.



Press the key. The LED lights up

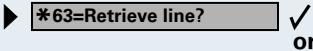


Select and confirm.



Enter the code.

or

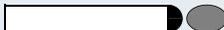

If the "Line retrieved" key → page 69 has been configured, press the key.



Enter the line number you noted earlier.

or



If a "Trunk key" was assigned to this line → page 69: LED flashes slowly. Press the key.

Step by Step

## Making Calls to Stored Destinations

### Redialing a Number

The last three external telephone numbers dialed are stored automatically. You can redial them simply by pressing a key. The station number appears on your screen for two seconds and is then dialed.



Press the key once to dial the number last dialed.

Press the key twice to dial the next to the last number dialed.

Press the key three times to dial the third-to-the-last number dialed.


### Displaying and dialing saved station numbers



Press the key.



Press the "OK" dialog key within two seconds to confirm your choice.

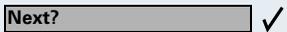

The next stored number is displayed. Press the "OK" dialog key to confirm four selection.



Select and confirm.



If this feature is configured (contact your service personnel), account codes entered are also saved → page 58.

### Using a Caller List

If you are unable to accept an external or internal call, the call attempt is stored in the caller list. You can store answered calls either manually (both internal and external calls) or automatically (external calls only), Contact your service personnel for details. Your telephone stores up to ten calls in chronological order. Each call is assigned a time stamp. The most recent entry not yet answered in the list is displayed first. Multiple calls from the same caller do not automatically generate new entries in the caller list. Instead, only the most recent time stamp for this caller is updated and its number incremented.

Step by Step

Retrieving the Caller List

**Precondition:** The service personnel in charge set up a caller list for your telephone.



Select the Phone tab.

Select and confirm.

Enter the code.

Show navigation softkeys.

The caller list is displayed with navigation softkeys:

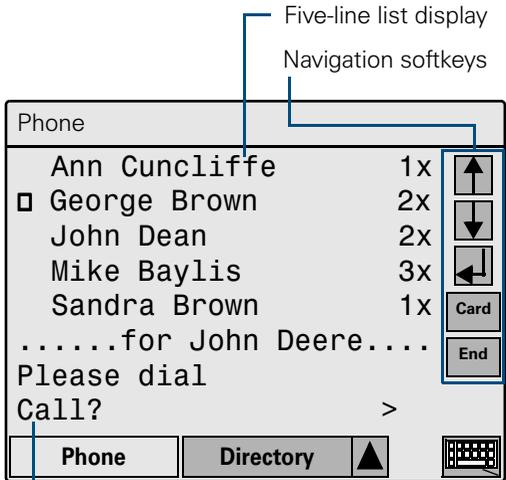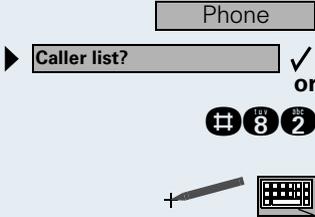

Five-line list display  
Navigation softkeys

Two-line dialog display



Click on softkeys or press keys to select the relevant parties (square at the start of the line).

## Step by Step

▶  ✓  
 ▶  ✓

or  
 or   
 or

or

### Ending a retrieve operation

Select and confirm.

Click on the softkey or press the key.

Press the key. The LED goes out.

Press the key. The LED lights up.

### Checking the Call Time/Additional Call Information

**Precondition:** You have retrieved the caller list, the call you want is displayed.

▶  ✓

or  
 or

Select and confirm.

Click on the softkey or press the key.

### Dialing a Station Number from the Caller List

**Precondition:** You have retrieved the caller list, the call you want is displayed.

▶  ✓

or  
 or

Select and confirm.

Click on the softkey or press the key.

The display switches to "Phone" → page 14.

---

 The caller is automatically deleted from the caller list when a connection is finally set up.

---

## Step by Step




### Removing an Entry from the Caller List

**Precondition:** You have retrieved the caller list, the call you want is displayed.

Confirm.

Press the key.

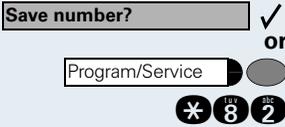

### Saving the Other Party's Station Number in the Caller List (Redial)

**Precondition:** You are engaged in a call or have called an external party.

Press the "OK" dialog key to confirm your selection

Press the key. The LED lights up. Enter the code.

Step by Step

## Dialing from the Internal Directory

If this function has been configured (ask the service personnel), all internal call numbers and central speed-dial numbers for which a name was assigned are stored in your internal directory.

**Precondition:** Names have been assigned to the station numbers stored in the system.




Lift the handset.



or

Press the key. The LED lights up.

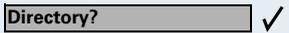


Confirm.



Show navigation softkeys.

The internal directory is displayed with navigation softkeys:

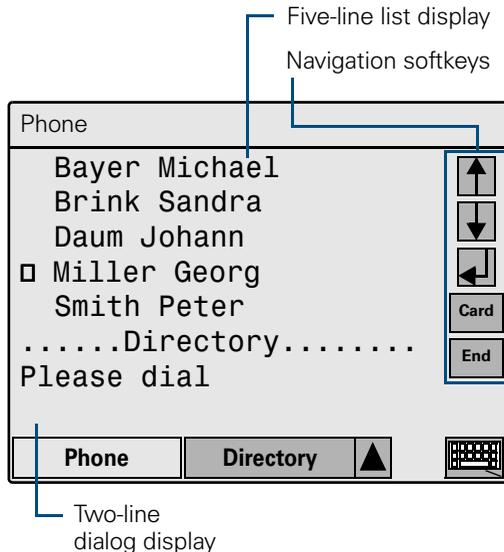

Press keys to enter the first letters of a name. Every letter entered narrows down your selection. Up to five of the names found are displayed at a time.



Click on softkeys or press keys to mark the name you want from the list of names displayed (square at the start of the line).

### Step by Step



Press the key to delete the letters to the left of the cursor one by one.

#### **The entry you want is displayed:**



or



Click on the softkey or press the key.

The display changes to "Phone" → page 14.

Step by Step


Personal

## Dialing from the Personal Directory

**Precondition:** The personal directory contains entries/ names with call numbers → page 115.

Select the Personal tab.

The personal directory opens:

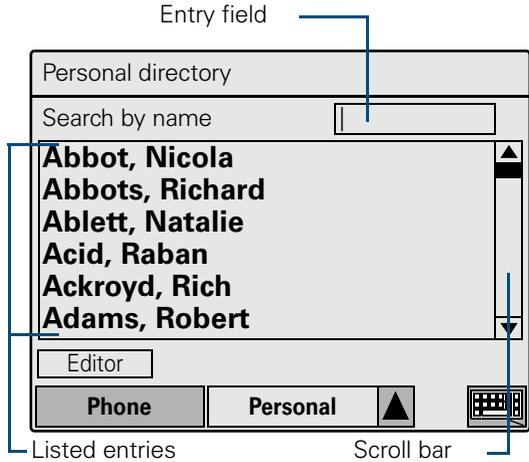

➡ If a different display appears when you open the personal directory, press "Cancel", "Menu" or "Exit" until this display appears.

## Step by Step



Mark the name you want. A scroll bar is displayed if more than six names are saved. You can browse the list by dragging the scroll bar.

or



Enter the name you want or just the initial letters (Entering characters → page 110); the selected name is highlighted inversely.

Every letter entered narrows down the selection. Up to six of the names found are displayed at a time.

if necessary 

Delete the letters to the left of the cursor one by one.

### Dialing the default call number:

**Precondition:** One of the call numbers entered for the marked name was set as the default call number → page 116. Otherwise select the call number to be dialed (see below).



Confirm.

or



Click on the softkey.

The display changes to "Phone" → page 14.

### Dialing a specific call number:



Dial a specific call number if you want to dial a number other than the default call number or if none of the call numbers entered for the current name was defined as the default call number.



Click on the softkey. The call numbers entered for the name are displayed → page 122.




Click on the softkey beside the call number you want. The display changes to "Phone" → page 14.

### The following softkeys are available:

1x or 2x

The default status is active for the directory list.

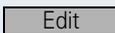

Click on the softkey to edit the current entry → page 119.

Step by Step

## Dialing from the Corporate Directory

**Precondition:** You can access a corporate directory via LAN.


 Ask the service personnel about availability.

Corporate

Select the Corporate tab.

The corporate directory opens:

Input field for fast search

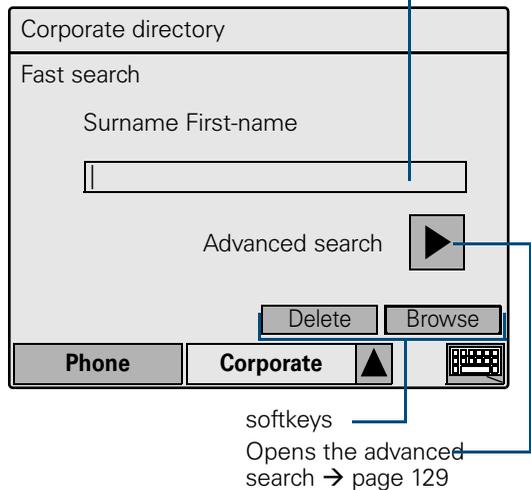

softkeys  
Opens the advanced search → page 129

A B C

Enter the name you want or just the initial letters (Entering characters → page 110), or use wildcards " \* ".

if necessary 

Delete the letters to the left of the cursor one by one.

 For information on the advanced search, see → page 129.

Browse

Start the search.

"Searching" appears in the top right of the display when the search is running. The search can be interrupted at any time with "Cancel".

### Step by Step

**if necessary**



Details

#### Dialing a call number:

If there is more than one suitable entry/name, select the entry you want (reverse-video).

Click on the softkey. The call numbers entered for the name are displayed.

Dial

Click on the softkey beside the call number you want. The display changes to "Phone" → page 14.

**1x or 2x**

Cancel

The default status is active for the corporate directory.

Next

On page 1 of 2 only: Display the second page of an entry's detailed information. The softkey changes to "Previous".

Previous

On page 2 of 2 only: Display the first page of an entry's detailed information. The softkey changes to "Next".

Step by Step

## Using Repertory Dialing Keys

**Precondition:** You have saved a station number on a repertory dialing key → page 67.



Press the key on which the number is saved. If the station number is located on the second level, first press "Shift".



You can also press the repertory dial key during a call. This automatically sets up a consultation → page 38.

## Using Station and System Speed-Dial Numbers

**Precondition:** You have stored station speed-dial numbers → page 68 or the service personnel has stored system speed-dial numbers.



Press the key. The LED lights up



Confirm.

or



Enter the code.



Enter a speed-dial number.

"\*0" to "\*9" = station speed-dialing.

"000" to "999" = system speed-dialing (contact your service personnel).

Step by Step

## Displaying and Assigning Call Charges

### Displaying Call Charges (Not for U.S.)

#### For the current call:

The display usually shows call charges at the end of a call (default setting).

If you wish to display charges continuously during a call in progress, service personnel must request this feature from your carrier.

Some carriers also let you display toll-free external calls. The message "Free of Charge" appears on the screen either before or during the call.



If a call is transferred, the charges are assigned to the telephone to which the call was transferred.

#### For all calls and the last one conducted:

The connection charges for the last chargeable call conducted are displayed first. Five seconds later, the total accumulated connection charges appear.

Program/Service 

Press the key. The LED lights up

▶ \*65=Show call charges? 

Select and confirm.

or

Enter the code.

Step by Step

## Displaying Call Charges for Another Telephone (Not for U.S.)

If this function is configured (contact your service personnel), you can display and print the chargeable calls for other telephones (such as a pay phone)

**Precondition:** You have programmed the function "View call charges" on a key → page 69.

The LED lights up to indicate that a you have conducted chargeable call since the last time you viewed the charges.



Press the "View call charges" key. The chargeable call appear on the screen.

Confirm to display additional chargeable calls.

- ▶  ✓
- or
- ▶  ✓
- or
- ▶  ✓
- or
- ▶  ✓
- ▶  ✓

Select and confirm.

Step by Step

## Dialing with Call Charge Assignment

You can assign external calls to certain projects.

**Precondition:** Service personnel has set up account codes for you.

Press the key. The LED lights up

Select and confirm.

Enter the code.

Enter the account code.

Press this key.

Confirm.

May be necessary, depending on how your system is configured; contact your service personnel for details.

Enter the number of the external station.

 You can also enter the account code during an external call.

Program/Service 

▶  ✓  
or



and   
or

✓  
 ✓



## Step by Step

# If You Cannot Reach a Destination ...

## Using Callback

If a user is busy or is not answering, you can store an automatic callback. This feature saves you from having to make repeated attempts to reach the user.

You receive a callback,

- When the other party is no longer busy
- When the user who did not answer has conducted another call.

## Storing a Callback

**Precondition:** You have reached a busy line or no one answers.

Confirm.

US: Callback ✓

UK: Set Callback ✓

or



Enter the code.


## Answering a Callback

**Precondition:** A callback was saved. Your telephone rings. "Callback: ..." appears on the display.

Lift the handset.



or

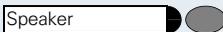

Press the key. The LED lights up.

You hear a ring tone.

## Checking and Canceling a Saved Callback

Select and confirm.

▶ View callbacks? ✓

or



Enter the code.

▶ US: Next callback? ✓

▶ UK: Display next? ✓

Select the displayed function and press the "OK" dialog key to display additional entries.

## Step by Step

Delete? ✓

### Deleting a displayed entry:

Press the "OK" dialog key to confirm your selection

▶ US: Exit? ✓

▶ UK: End? ✓

or

Program/Service ●

or

Speaker ●

### Ending callback display:

Select and confirm.

Press the key. The LED goes out.

Press the key. The LED goes out.

Camp-on

## Call Waiting (Camp-On)

**Precondition:** You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Wait (approx. 5 seconds) until "Camp-on" appears on the display and the busy tone is followed by the ring tone.

The called party can then respond → page 20



The called party can prevent automatic call waiting → page 21.

If this feature is configured (contact your service personnel), you will hear the ring tone and the message "Camp-on" is immediately displayed.

---

## Step by Step

### Busy Override - Joining a Call in Progress

This function is only available if it has been configured. (contact your service personnel).

**Precondition:** You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

►  ✓

or

\* 6 2

Select and confirm.

Enter the code.

The called party and person to whom this party is talking hear an alerting tone every two seconds.

If the called party has a system telephone with display, the following appears on the screen: "Override: (station no. or name)".

You can now start talking.

Step by Step

## Telephone Settings

 For information on other settings for optiPoint 600 office, see → page 136.

### Adjusting the Ring Volume

**+** or **-**

**US: Ring volume?** ✓

**UK: Ringer volume?** ✓

**+** or **-**

Press these keys while the phone is idle.

Confirm.

To raise or lower the volume: Keep pressing the keys until the desired volume is set.

✓ Save.

### Adjusting the Ring Tone

**+** or **-**

**▶ US: Ring tone?** ✓

**▶ UK: Ringer tone?** ✓

**+** or **-**

Press these keys while the phone is idle.

Select and confirm.

To adjust the ring tone: Keep pressing the keys until the desired tone is set.

✓ Save.

## Step by Step

## Adjusting the Attention Ring Volume

If you belong to a team that uses trunk keys, the telephone can alert you to other calls in the team even when you are engaged in another call → page 102. You hear the attention ring.

⊕ or ⊖

Press one of these keys while the phone is idle.

▶ **US: Attention Ring Vol?** ✓

Select and confirm.

▶ **UK: Volume?** ✓

⊕ or ⊖

To raise or lower the volume: Keep pressing the keys until the desired volume is set.

✓

Save.

## Adjusting the Speakerphone to the Room Acoustics

To help the other party understand you clearly while you are talking into the microphone, you can adjust the telephone to the acoustics in your environment: "Quiet room", "Normal room" and "Noisy room".

⊕ or ⊖

Press one of these keys while the phone is idle.

▶ **Speakerphone mode?** ✓

Select and confirm.

⊕ or ⊖

To set the room type: Keep pressing these keys until the setting you want appears on the screen.

✓

Save.

## Step by Step

### Selecting the Language of Screen Prompts

You can change the dialog language in the "Phone" tab. To change the language in local applications, see → page 138.

Program/Service 

Press the key. The LED lights up

▶ **More features?** ✓

Confirm.

▶ **\*48= Select language?** ✓

Confirm.

or

Enter the code.

▶ **15=Spanish?** ✓

Select the language you wish to use (such as "Spanish") and press the "OK" dialog key to confirm.

### Display Illumination

If you entered a reset time for the display → page 139, the optiPoint 600 office's display illumination activates automatically when the phone is used, e.g. when a call number is entered. The illumination automatically deactivates in accordance with the reset time entered.

The display illumination remains permanently active if no reset time was entered.

### Adjusting the Display to a Comfortable Reading Angle

You can swivel the display unit. Adjust the display unit so that you can clearly read the screen.

## Step by Step

## Locking the Telephone to Prevent Unauthorized Use

You can prevent unauthorized persons from using your telephone and its electronic notebook during your absence.

**Precondition:** You must have configured a personal identification number (PIN) for your telephone → page 66.

### To lock and unlock the telephone:

▶  Changeover on? ✓  
or

▶  Changeover off? ✓

or

\* 6 6 or # 6 6



Select and confirm.

Enter the code for "on" or "off".

Enter the telephone lock PIN → page 66.



While the telephone is locked, a special dial tone sounds when you lift the handset. You can continue to dial internal numbers as usual.

Your telephone can also be locked or unlocked again by an authorized party → page 89.

Step by Step

## Saving Your PIN

To use the functions

- to prevent unauthorized persons from using your telephone → page 65
- to use another telephone like your own → page 84
- to change your call number → page 85

you need to enter a personal identification number, which you can save yourself.



Press the key. The LED lights up



Confirm.



Enter the PIN.



Enter the current five-digit PIN.

If you have not yet assigned a PIN, use the PIN "00000" the first time you enter it.



Enter the new PIN.



Repeat the new PIN.



If you forget your PIN, contact your service personnel, who can reset your PIN to "00000".

Step by Step

## Saving Station Numbers, Functions, Procedures and Appointments

You can save a frequently-dialed number, or frequently-used functions/procedures (comprising several operating steps) to any free key on your telephone or add-on device.

If you have programmed a Shift key, you can assign numbers and functions on two levels of the programmable keys. The second (Shift level) can accept only an external station number.

### Saving Repertory Dialing Numbers on a Key

Program/Service 

Press the key. The LED lights up

▶ **\*91=Prog. feature key?** ✓

Select and confirm.

or

Enter the code.

**if necessary**

If the "Shift Key" has been configured → page 69, press the key.



Press the key. If the key is already in use, its assignment appears on the screen.



**US: Change key?** ✓

Confirm.

**UK: Change feature?** ✓

Confirm.

**Redial key?** ✓

Confirm.



Enter the station number.

**US: Save?** ✓

Confirm.

**UK: Save entry?** ✓

## Step by Step

- ▶  ✓
  - ✓
  - ✓
- or**
- ▶  ✓
  - ▶  ✓

### If you make a mistake:

Select and confirm. This deletes all entered digits.

Confirm.

Select and confirm.



Simply press the key to dial a stored telephone number → page 55.

If you have saved an internal station number (=DSS call), the corresponding LED signals various states → page 70, → page 101.

You can do this while a call is in progress.

## Storing Station Speed-Dial Numbers

You can store the ten numbers which you use the most and dial them using your own station speed-dial numbers: \*0 through \*9 → page 55.

Program/Service

- ▶  ✓
- or**

Press the key. The LED lights up

Confirm.



Enter the code.



Enter the speed-dial number you wish to use (\*0 to \*9). If the speed-dial number is already in use, the programmed station number appears on the screen.

- ✓
- ✓

Confirm.



First enter the external code and then the external station number.

- ✓
- ✓

Confirm.

## Step by Step

- ▶  ✓
- ✓
- ✓
- or
- ▶  ✓
- ▶  ✓
- or
- ▶  ✓
- or
- ▶  ✓
- ▶  ✓

- 
- ▶  ✓

or



- 
- 
- ✓
- ✓
- ▶  ✓

### If necessary

- ▶  ✓
- ▶  ✓
- ✓
- ✓
- or
- ▶  ✓
- ▶  ✓

### If you make a mistake:

Select and confirm. This deletes all entered digits.

Confirm.

Select and confirm.

Select and confirm.

Select and confirm.

## Assigning Functions to Keys

Press the key. The LED lights up

Select and confirm.

Enter the code.

Press the key. If the key is already in use, its assignment appears on the screen.

Confirm.

Select and confirm the function, such as "Do not disturb".

All programmable functions appear on the screen. See Quick-Reference Operating Instructions (Appendix): section ... about function keys.

Select and confirm.

Some functions (such as "Call forwarding") accept incomplete entries. This means you have to add more digits later on when you activate the function by pressing a key.

Confirm.

Select and confirm.




Now press the key to access the function directly. If the function can be turned on and off, such as "Do not disturb", pressing the key multiple times turns the function on and off.

Step by Step

**Meaning of LED Signals for Saved Functions:**

**Call forwarding, Forwarding - trunk, Forward Line, US:Night answer UK:Night Service, Do not disturb, Changeover, Advisory message, Ringer cutoff, HF answerback on/off, US:Join/leave group UK:Hunt group join/leave, Caller ID suppression, Call wait.term., Waiting tone off, Ring Transfer, Door opener on/off, Control Relay, Ringing group on, Shift Key, UCD (Available on/off, Work on/off, Night answer on/off):**

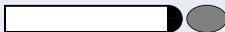

Saved function is not active.



Saved function is active.




**Callback:**

You have not set a callback.



You have set a callback.

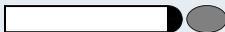

**Mute (on/off):**

The microphone is switched on.




The microphone is switched off.




**Caller list:**

No calls saved.

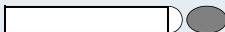

Call request saved.

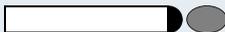

**Redial key (internal), Direct station select:**

The other party is not engaged in a call.



The other party is engaged in a call or has activated do not disturb.



Flashing rapidly - A caller is trying to reach you, please pick up the phone.

Flashing slowly - A caller is trying to reach another party, who has not yet answered.




**Mailbox:**

No messages present.




Message(s) present.

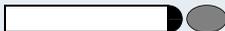

**Call key, General call key, Trunk key, MULAP Key, Temporary MSN:**

No call on assigned trunk.

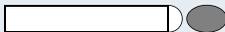

Active call on assigned trunk.



Flashing rapidly- A call has arrived on this line; press the key to pick up the call.

Flashing slowly - A call on this line was placed on hold.

## Step by Step



### Trunk group key

At least one trunk is free.



All trunks in the trunk group are busy.




### View call charges:

No chargeable calls have been made since the last time call charges were displayed.



Chargeable calls have been made since the last time call charges were displayed.

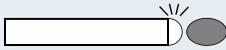

### Call forwarding, Forward Line:

Flashing slowly - Either you or your trunk is the destination of a forwarded call.



### Fax details

No fax received or no message on answering machine.



Fax received or message on answering machine.



### View number of calls:

No callers waiting



Flashing rapidly - Callers waiting (a certain number is exceeded).

Flashing slowly - Callers waiting (a certain number was reached).

### The following functions are assigned to keys which have no LED:

Redial key (external), Procedure key, Trace call, Speed-dial, Release call, Clear, US:Lock all phones UK:Telephone Lock, Send message, US:Directory UK:Phonebook, Call waiting, US:Connect/Toggle UK:Shuttle, Conference, Speaker call, Retrieve line, Reserve trunk, Release trunk, Temporary Phone, Override, US:Park UK:Call Park, Pickup - directed, Pickup - group, Account code, Show call charges, Radio paging equip, Answer page, Timed reminder, Open door, DTMF dialing, Recall key, Room monitor, Hold key, Consultation, Associated dial, Associated serv., Tel. data service, Relocate

Step by Step

## Assigning a Procedure (Operating Steps) to a Key

Station numbers and functions which require additional inputs, i.e. comprise several operating steps, can be saved to a single key on your telephone.

Using the associated dial function, for example → page 37, you can save all the remaining inputs required (station number of the calling party + the station number to be dialed) to a single key. Station numbers which require additional inputs but also dial pauses can also be stored.

Program/Service

Press the key. The LED lights up.

▶ \*91=Prog. feature key? ✓

Select and confirm.

or

Enter the code.

Press the key. If a function has already been assigned to this key, a corresponding message is displayed.

US: Change feature? ✓

Confirm.

UK: Change key? ✓

▶ Procedure key? ✓

Confirm.



Enter the procedure, e.g. **"\*67 231 089123456"**.  
 \*67= code for associated dial  
 231= station number of the calling party  
 089123456 = number to be dialed.

**If necessary**

Redial

To insert pauses, press this key (a "P" is displayed).

US: Save entry? ✓

Confirm.

UK: Save? ✓

or

**If you make a mistake:**

▶ Previous? ✓

Select and confirm. This deletes all digits entered.

### Step by Step

**US: End?** ✓  
**UK: Exit?** ✓

Confirm.

or

▶ **US: Program another key?** ✓  
▶ **UK: Another key?** ✓

Select and confirm.



Select the stored procedure by pressing a key. Procedures containing functions which can be switched on/off can be activated by pressing the key, and deactivated by pressing the same key again.

You can also press a procedure key during a call. The stored digits are automatically sent as DTMF signals → page 34.

---

Step by Step

## Saving Appointments

You can tell your telephone to give you a call when you want to be reminded of an appointment → page 24. To do this, you need to save the time you want the call to be made. You can enter a single appointment that will take place in the next twenty four hours, or you can enter a daily recurring appointment.

Program/Service

Press the key. The LED lights up

▶ \*46=Timed reminder on? ✓  
or

Confirm.

Enter the code.



Enter a 4-digit time, such as 0905 for 9:05 (= 9.05 a.m.) or 1430 for 14.30 (= 2.30 p.m.).

If necessary or

If the selected language is "US English" (configure → page 64) you can enter the code 2 for "am" or 7 for "pm" (standard = "am").

One time only? ✓

Confirm.

or

▶ Daily? ✓

Select and confirm.

US: Save? ✓

Confirm.

UK: Save entry? ✓

### Deleting and checking a saved appointment:

Program/Service

Press the key. The LED lights up

▶ #46=Timed reminder off? ✓  
or

Confirm.

Enter the code.

Delete? ✓

Confirm.

or

▶ US: Exit ✓

Select and confirm.

▶ UK: End ✓

## Step by Step

## Testing the Telephone

## Testing the Telephone Functions

You can test your telephone functions.

**Precondition:** Your telephone is idle.

Press the key. The LED lights up.

Select and confirm.

Enter the code.

If everything is OK,

- all LEDs on the telephone start flashing, including the ones on the key module (only the Program/Service menu LED lights up);
- your station number appears on the screen;
- all pixels in the display are activated;
- the ringer signal sounds.

Program/Service

▶ \*940=Phone test? ✓  
or

\* 9 4 0

## Step by Step

### Checking the Key Assignments

You can check the assignment of keys on your telephone to see which functions are programmed on which keys.

Program/Service 

Press the key. The LED lights up.

▶ **\*91=Prog. feature key?** ✓  
or

Select and confirm.

Enter the code.



Press the key. The key assignment appears on the screen.

▶ **US: Another key?** ✓

Select and confirm.

▶ **UK: Program another key?** ✓

or

▶ **US: Exit?** ✓

Select and confirm.

▶ **UK: End?** ✓

## Step by Step

## Call Forwarding

### Using Variable Call Forwarding

You can immediately forward internal or external calls to different internal or external telephones (destinations). (External destinations require special configuration in the system.)

 Special features must be taken into consideration if your telephone operates with HiPath AllServe (system networking via PC network) → page 143!

▶  ✓  
or

\* 1

Select and confirm.

Enter the code.

✓  
or

▶  ✓  
or

▶  ✓  
or

1 or 2 or 3

Select and confirm.

Enter the code.



Enter the number of the telephone that is ringing.

✓  
 ✓

Confirm.

### Deactivating call forwarding:

▶  ✓  
or

# 1

Select and confirm.

Enter the code.

 When call forwarding is active, a special dial tone sounds when you lift the handset.

If DID DTMF is active (contact your service personnel), you can also forward calls to this destination. Destinations: fax = 870, DID = 871, fax DID = 872.

Step by Step

### Using Night Answer

When night answer mode is active, for example during a lunch break or after office hours, all external calls are immediately forwarded to a specific internal telephone (night station). The night station can be defined by the service personnel (standard night answer service) or by you (temporary night answer service).

 Special features must be taken into consideration if your telephone operates with HiPath AllServe (system networking via PC network) → page 144!

#### Activating this function:

  ✓  
or  
  

Select and confirm.

Enter the code.

✓  
or  


Press the "OK" dialog key to confirm (= standard night answer service)

Enter the code (= standard night answer service).



Enter the destination number (= temporary night answer service).

✓  
 ✓

Confirm.

#### Deactivating night answer:

  ✓  
or  
  

Select and confirm.

Enter the code.

Step by Step

## Call Forwarding in the Carrier Network and Forwarding Multiple Subscriber Numbers (MSN) (Not for U.S.)

If this function has been configured (contact your service personnel), you can forward calls to your assigned multiple subscriber number (MSN) (DID number) directly within the carrier network.

For example, you can forward your phone line to your home phone after business hours.

▶  ✓  
or

6 4

Select and confirm.

Enter the code.

✓  
or

▶  ✓  
or

▶  ✓  
or

or 2 or 3

Select and confirm the line type you wish to use.

Enter the code.



Enter your DID number.



Enter the destination number (without the external code).

✓

Confirm.

### Deactivating call forwarding:

▶  ✓  
or

6 4

Select and confirm.

Enter the code.

✓  
or

or 2 or 3

Confirm the displayed call forwarding type.

Enter the activated call forwarding type.



Enter your DID number.

Step by Step

# Using Other Functions

## Sending a Message

You can send short text messages to users who have system telephones. Transmitted text messages are signaled in the same way as a callback request on system telephones (e.g. optiPoint 500 entry).

### Creating and Sending a Message

- ▶ **US: Send message?** ✓
- ▶ **UK: Send Message?** ✓

Select and confirm.



or  
Enter the code.



Enter the recipient's internal station number.

- ▶ **0=Please call back** ✓

Select and confirm the preprogrammed message (which can be changed by the service personnel).



or  
Enter the code directly.  
The codes appear on the screen, next to the messages to which they are assigned.

- ▶ **Enter message text?** ✓

or  
Select and confirm.

## Step by Step

0 ... <sup>with</sup>9, ✖, ⇄

## Entering text via the keypad

Enter text (max. 24 characters) via the keypad. Digit keys must be pressed a specific number of times to enter letters.

Example:

"R" = Press the ✖ key once and the <sup>with</sup>7 key three times.

key	1x	2x	3x	4x	5x
<sup>with</sup> 1	(1)	1	(2)		
<sup>with</sup> 2	a	b	c	2	
<sup>with</sup> 3	d	e	f	3	
<sup>with</sup> 4	g	h	i	4	
<sup>with</sup> 5	j	k	l	5	
<sup>with</sup> 6	m	n	o	6	
<sup>with</sup> 7	p	q	r	s	7
<sup>with</sup> 8	t	u	v	8	
<sup>with</sup> 9	w	x	y	z	9
0	(2)	.	-	0	
✖	(3)				
⇄	(1)				

- 1 Delete the character to the left
- 2 Space
- 3 Next letter in upper-case

if necessary <sup>with</sup>1 or ⇄

or

A B C

if necessary <sup>Back-space</sup>

Delete characters to the left of the cursor one by one.

## Entering text via external keyboard

Enter text (max. 24 characters) via the external keyboard.

Delete characters to the left of the cursor one by one.

 For an overview of the external keyboard's key functions, see → page 113.

## Step by Step

Send? ✓

### After entering text:

Confirm.

▶ View sent message? ✓  
or



### Deleting/Displaying the Message Sent

Select and confirm.

Enter the code.

▶ [ ] ✓

Follow the display prompts.

### Answering Messages

"Messages received:" appears on your screen, along with an indication of the length.

US: View messages? ✓

UK: Display Messages? ✓

Confirm.

▶ [ ] ✓

Follow the display prompts.

## Step by Step

## Leaving an Advisory Message

You can leave an advisory message on your telephone screen for internal callers who want to reach you while you are away from your desk.

When another party calls you, the message appears on the caller's screen.

▶  ✓  
or

\* 6 9

Select and confirm.

Enter the code.

▶  ✓

or  
0 ... 9

Select and confirm the preprogrammed message (which can be changed by the service personnel).

Enter the code directly.

The codes appear on the screen, next to the messages to which they are assigned.



You can add numeric input to preprogrammed messages that end in a colon.

or

▶  ✓

A B C

Select and confirm.

Enter text (max. 24 characters).



For a detailed description of the various text input options, see → page 81.

✓

Confirm.

## Deleting Advisory Messages

▶  ✓  
or

6 9

Select and confirm.

Enter the code.

If you have programmed an "Advisory message" key → page 69: The LED lights up. Press the key.

## Step by Step

### Using Another Telephone Like Your Own

Other people can temporarily use your telephone for outgoing calls as though it were their own.

Program/Service 

Press the key. The LED lights up

▶ \*508=Temporary Phone?   
or

Select and confirm.

Enter the code.



Enter the other user's station number.



**If necessary**

Enter the other user's telephone lock PIN. → page 66.

**Change password**

Users who have not yet selected a personal identification number are prompted to do so on their own telephones.



Dial the external number.

This state is canceled at the end of the call.

## Step by Step

## Change Call Number (Relocate)

You can put your call number on every other available telephone when it is set up (ask the service personnel). Your previous telephone then receives the old call number of your new telephone. The call number together with the settings (e.g. programmed keys) of the telephone are changed.

**Precondition:** Your old and new telephone are the first telephones at each connection. The telephones are in idle state.

The following procedure is carried out on the new telephone.



Press the key. The LED lights up.

Select and confirm.



Enter the code.



Enter your own call number.



Enter code (telephone lock) → page 66.

(This is not necessary if you have not determined a code yet).



Confirm.



Enter the code.



If you exchange call numbers from different system telephones, all programmed keys are replaced with the default assignment.

You can, however, connect your telephone to another connection and carry out the procedure.

Step by Step

## Fax Details and Message on Answering Machine

If a fax or answering machine is connected to your system and you have assigned the "Fax details" function to a programmable key → page 69, the key lights up when a fax or a message has been received.

### Deactivating indication:



Press the illuminated "Fax details" key. The LED goes out.

## Resetting Services and Functions (System-Wide Cancellation for a Telephone)

There is a general reset procedure for activated functions. The following functions are canceled, if they were activated:

- Forwarding on
- Advisory msg. on
- Ringing group on
- Hunting group off
- Suppress call ID
- Waiting tone off
- DND on
- Ringer cutoff on
- Messages received:
- View callbacks



Press the key. The LED lights up



Select and confirm.



Enter the code.

## Step by Step

## Silent Monitor (U<sub>P0/E</sub> only)

If this function has been configured (contact your service personnel), you can join a call already in progress at an internal station and listen in unnoticed.



Enter the code.


Enter the internal station number.

## Monitoring a Room

A telephone can be used to monitor a room. The function must be activated on the telephone that you want to monitor.

Calling this telephone lets you hear what is going on in the room.

### Activating the telephone to be monitored:

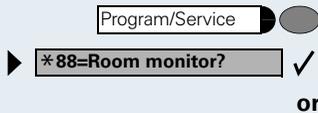

Press the key. The LED lights up

Select and confirm.

or



Enter the code.

You can either leave the telephone in speakerphone mode or lift the handset and leave it directed towards the noise source.

### Deactivating the telephone to be monitored:



Press the illuminated key. The LED goes out.

or



Replace the handset.

### Monitoring the room:



Enter the internal number if the telephone in the room you wish to monitor.

Step by Step

## Activating Functions for Another Telephone

If this function has been configured (contact your service personnel), you can turn the following functions on and off for other telephones. This feature is also known as associated service.

- Do not disturb, code: \*97/#97 → page 25
- Call forwarding, code \*11, \*12, \*13/#1 → page 77
- Locking and unlocking telephone, code \*66/#66 → page 65
- Group ringing, code \*81/#81 → page 104
- Leaving an advisory message, code \*69/#69 → page 83
- Group call, code \*85/#85 → page 104
- Reset services and functions, code #0 → page 86
- Control relay, code \*90/#90 → page 93
- Night service, code \*44/#44 → page 78
- Timed reminders, code \*65 → page 74

Program/Service 

 \*83=Associated serv?  or



Press the key. The LED lights up  
Confirm.

Enter the code.

Enter the internal number of the telephone for which you want to activate the function.



Enter the code, such as \*97 for do not disturb.

Follow the prompts on the screen for any further input.

## Step by Step

## Locking Another Telephone to Prevent Unauthorized Use

If this function has been configured (contact your service personnel), you can lock other telephones to prevent unauthorized use, and later unlock them again.

You can use this function to unlock the telephone for users who have locked their telephones and then forgotten their PINs.

Program/Service 

▶ **US:\*943=Lock all phones?** ✓  
▶ **UK:\*943=Telephone Lock?** ✓

or

Press the key. The LED lights up

Confirm.

Enter the code.



Enter the internal number of the telephones that you want to lock or unlock.

**\*=Lock phone?** ✓

or

**#=Unlock phone?** ✓

or

 or 

Confirm.

Enter the code.

## Using System Functions from the Outside (DISA: Direct Inward System Access)

If this function has been configured (contact your service personnel), you can set up external outgoing calls from outside the system, just like an internal user. You can also activate and deactivate the following functions in your system:

- Reset services and functions, code #0 → page 86
- Call forwarding, code: \*1/#1 → page 77
- Lock and unlock all phones, code: \*66/#66 → page 65
- Save PIN, code: \*93 → page 66

Step by Step

- Send a message, code: \*68/#68 → page 80
- Leave an advisory message, code: \*69/#69 → page 83
- Group ringing, code: \*81/#81 → page 104
- Group call, code: \*85/#85 → page 104
- Suppress caller ID, code: \*86/#86 → page 33
- Waiting tone, code: \*87/#87 → page 22
- Open door, code: \*61 → page 28
- Door opener on/off, code: \*89/#89 → page 29
- Control relay, code \*90/#90 → page 93
- Do not disturb, code: \*97/#97 → page 25
- Ringer cutoff function, code: \*98/#98 → page 26
- Speed-dialing, code: \*7 → page 55
- Associated service, code: \*83 → page 88

**Precondition:** You have a telephone that uses tone dialing (DTMF dialing) or you can switch your telephone to tone dialing. The telephone is not connected to the system.



Set up a call to the system. Enter the station number (contact your service personnel).



Wait for a continuous tone (if necessary switch the telephone to tone dialing), then enter the internal number that has been assigned to you and the associated PIN.



Enter the code (necessary only if programmed in the system).



Wait for a dial tone and then enter the code, such as \*97 for Do not disturb on. Make other inputs as necessary; (refer to the operating instructions for pulse and DTMF telephones).

or



Dial the external number.



You can only execute one function at a time, or set up only one outgoing connection.

The connection is immediately released after successful activation of a function.

In the case of an external-external call, the connection is released as soon as either of the parties ends the call.

## Step by Step

## Using Functions in ISDN via Code Dialing (Keypad Dialing)

If authorized (contact your service personnel), you can set ISDN functions via code dialing in some countries.



Press the key. The LED lights up.

Confirm.

Enter the code.



Enter the number of the trunk you wish to use (contact your service personnel).



Entering a code for required ISDN function.



Contact your network provider to find out which ISDN functions can be code-controlled in your country.


Siemens AG shall not be liable for damages/ costs which may be incurred by fraudulent activities or remote operation (e.g. toll fraud).

Step by Step

## Controlling Connected Computers or Other Programs and Telephone Data Service (HiPath 3500/3550/3700/3750 Only)

If this function has been configured (contact your service personnel), you can control connected computers or programs running on them, such as hotel services or information systems, from your telephone.

**Precondition:** You have set up a connection.

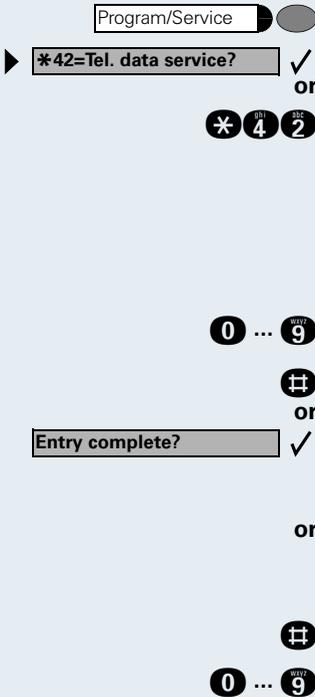

Press the key. The LED lights up

Confirm.

Enter the code.

The connected computer now prompts you to enter the data, which you can do in one of two ways. Contact your service personnel to find out which option is programmed in your system:

- Input in en-bloc mode

Enter data.

Press this key at the end of the entry.

Confirm.

or

- Input in online mode:

The connected computer processes your entries directly.

Enter the code.

Enter data.

## Step by Step

## Controlling Relays

If this function has been configured (contact your service personnel), you can turn up to four relays on and off to control different facilities (such as a door opener). Depending on how they are programmed, you can switch the relays on and off or switch them on and have them switched off automatically after a timeout.



Special features must be taken into consideration if your telephone operates with HiPath AllServe (system networking via PC network) → page 146!

▶  ✓

or

▶  ✓

or

or

Enter the code for "on" or "off".

...

Enter the relay.

## Sensors (HiPath 3300/3350/3500/3550 Only)

If this function has been configured (contact your service personnel), sensors detect signals, causing your phone to ring and a message to appear on your screen.

Step by Step

## Radio Paging (Not for U.S.)

If paging equipment is connected to your system (contact your service personnel), you can contact people via their pocket receivers.

The pocket receiver indicates to the person you are looking for that someone is trying to get in touch. The person you page can then go to the nearest telephone and call you.

The operating procedures differ according to the type of radio paging equipment connected (simple or enhanced paging equipment).

### Simple Paging Equipment

#### Paging:

To be paged, you must have activated a call ringing group → page 106, call forwarding → page 77, or call re-direction (ask the service personnel) to the internal station number of your paging equipment. A call request is then signaled automatically.

#### Answering the page from the nearest telephone:



Lift the handset.



Enter the code.




Enter your own station number.

### Enhanced Paging Equipment (Hipath 3700/3750 Only)

#### Paging:



Press the key. The LED lights up.

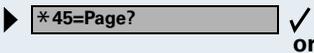

Select and confirm.



Enter the code.



Enter the number of the party you want to page.

## Step by Step

▶ **1=Display information?** ✓

or

▶ **2=Text?** ✓

Select and confirm.

### Answering the page from the nearest telephone:



Lift the handset.

Program/Service

Press the key. The LED lights up.

▶ **#45=Answer page?** ✓

or



Enter the code.



Enter your own station number.

Step by Step

## Team and Executive/Secretary Functions with Trunk Keys

If this function has been configured (contact your service personnel), you belong to a team of users for whom special keys were programmed:

- Trunk keys (MULAP keys)
- Direct station selection keys
- Group call key  
(not on the executive telephone in an executive/secretary team)
- Ring transfer keys  
(only in an executive/secretary team)

As a team member, you can also program these keys yourself ("MULAP key", "Direct station select", "US:Join/leave group UK:Hunt group join/leave", "Ring Transfer: on/off") → page 69. You can also program a call forwarding key ("Forward Line") for each line.

### Using Trunk Keys

A separate trunk is assigned to each team member. All other team members have the same trunk keys for these trunks on their telephones. This means that every team member can use all programmed trunk keys. Each team member can also be reached under a separate station number, if one was assigned.

#### Meaning of LED Indications on Trunk Keys:



Trunk key LED is off - Trunk is free and can be used.

or



Trunk key LED is lit - Trunk is in use.

or



Trunk key LED is flashing **rapidly** - A call on the trunk needs to be answered.

or




Trunk key LED is flashing **slowly** - A call on hold is waiting.

Step by Step

### Answering Calls with Trunk Keys

**Precondition:** Your telephone is ringing and/or the trunk key is flashing rapidly.

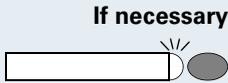

Press the rapidly flashing trunk key. This is not necessary if the trunk is automatically assigned to you when you lift the handset or press the "Speaker" key; in this case the assigned trunk key lights up.



Lift the handset.

With on-hook dialing: Use speakerphone mode.

### Making Calls with Trunk Keys



Press the free trunk key that you want to use to set up your call.

This is not necessary if the trunk is automatically assigned to you when you lift the handset or press the "Speaker" key; in this case the assigned trunk key lights up.



Dial the station number.




When the other party answers, Lift the handset.

With on-hook dialing: Use speakerphone mode.

### Using a Trunk Key to Place a Call on Hold and Retrieve it Again

**Precondition:** You are conducting a call over a trunk in your group. The "US:Hold UK:Common Hold" key has been programmed on your telephone → page 69.


#### Placing a call on hold:

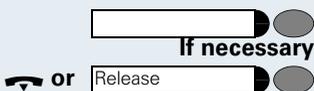

Press the "US:Hold UK:Common Hold" key.

Replace the handset or press the key. Depending on the configuration (contact your service personnel), this may be necessary so other team members can also pick up the call on hold.

## Step by Step

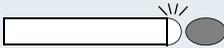

### Retrieving the call:

Press the slowly flashing trunk key.

### Switching Between Phone Calls on Multiple Trunks

**Precondition:** You are conducting a call over a trunk in your group. Another trunk key starts flashing.



Press the flashing trunk key. The first party is placed on hold on the other trunk.




Press the slowly flashing trunk key. The second party is placed on hold.

You can switch between the two call as many times as you wish. Always press the slowly flashing trunk key.

Step by Step

## Forwarding Calls on Lines

You can immediately forward internal or external calls on your lines to different internal or external telephones (destinations); even external destinations are possible in certain system configurations. Activating call forwarding for one trunk activates the function for all trunk keys assigned to this trunk in your group.

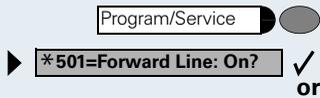

Press the key. The LED lights up  
Select and confirm.




Enter the code.



Press the trunk key you wish to use.  
Enter the number of the trunk you wish to use.



If available. Press the "Forward Line" key.  
(You have stored the incomplete "Forward Line" function on the key, excluding the call forwarding type and destination → page 69.)

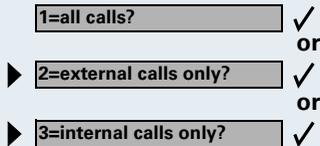

Select and confirm.



Enter the code.



Enter the destination number.



Confirm.




If available. Press the "Forward Line" key. (You have stored the call forwarding type and destination on the "Forward Line" key → page 69.)

## Step by Step

Program/Service 

▶ #501=Forward Line: Off?  ✓  
or

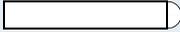

or  

### Deactivating call forwarding:

Press the key. The LED lights up

Select and confirm.

Enter the code.

Press the trunk key you wish to use.

Enter the number of the trunk key you wish to use.

or

If available. Press the "Forward Line" key.



If you have activated call forwarding for a trunk, a special dial tone sounds when the line is seized.

### Meaning of LED Indications on the "Forward Line" Keys:

The LED on the "Forward Line" key is off - call forwarding is not active for this trunk.

or

LED on the "Forward Line" key is lit - call forwarding is active for this trunk.

or

LED on the "Forward Line" key is flashing **slowly** - the trunk is a call forwarding destination.

Step by Step

## Using DSS Keys

Each team member has a DSS key for every other member in the team. This enables every team member to reach all other members of the team directly, simply by pressing a key.

### Meaning of LED Indications on DSS Keys



LED on the DSS key is off - the team member is not engaged in a phone call.

or




LED on the DSS key is lit - the team member is engaged in a phone call or has activated do not disturb.

or



LED on the DSS key is flashing **rapidly** - a call has arrived for you and needs to be answered.

or

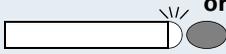

LED on the DSS keys is flashing **slowly** - a caller is trying to reach another member of your team, who has not yet answered.

## Using DSS Keys to Answer Calls

**Precondition:** Your telephone is ringing and/or a DSS key is flashing.

If necessary



Press the flashing DSS key. This is not necessary if you are receiving a DSS call and the DSS key is flashing rapidly.




Lift the handset.

or

With on-hook dialing: Use speakerphone mode.

## Calling a Team Member Directly

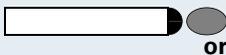

Press the direct station selection key.

or



If the team member you wish to reach is engaged in another call, the DSS key on your telephone is illuminated. You can make the call even in this case.




When the other party answers: Lift the handset.

or

With on-hook dialing: Use speakerphone mode.

## Step by Step

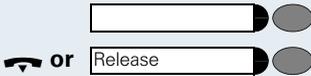


### Transferring a Call in Progress

Press the DSS key and announce the call, if desired.

Replace the handset or press the key.

### Accepting a Call for Another Team Member

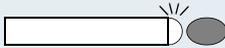

Press the flashing DSS key or trunk key.



Lift the handset.

With on-hook dialing: Use speakerphone mode.

### Joining or Leaving a Group Call (Not for the Executive Telephone in an Executive/Secretary Team)

By default, your telephone rings when a call arrives on your line.

If you want your phone to ring even when calls arrive on other lines, you can turn your ringer on and off for each line in your group → page 104.

Your telephone rings (one time only or every four seconds) even when you are engaged in another call (attention ring volume → page 63).

Step by Step

## Transferring Calls Directly to the Executive (Only in an Executive/Secretary Group)

Normally, audible signaling of all calls for the executive is heard only in the secretary's office.

You can activate audible signaling so that calls are only signaled on the executive telephone and on a second telephone assigned to it.

### Activating ring transfer:



Press the "Ring Transfer" key. The LED lights up.

or



Press the key. The LED lights up




Select and confirm.

or



Enter the code.

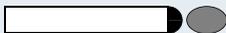

Press the trunk key you wish to use.

or



Enter the number of the trunk you wish to use.

### Deactivating ring transfer:



Press the "Ring Transfer" key. The LED goes out.

or



Press the key. The LED lights up



Select and confirm.

or



Enter the code.



Press the trunk key you wish to use.

or



Enter the number of the trunk you wish to use.

Step by Step

## Using Other Team Functions

### Turning Group Call On and Off

If this function has been configured (contact your service personnel), you belong to one or more groups of users who can each be reached under a hunt group or group call number.

Incoming calls are signaled on all group member telephones in the order in which they are received (hunt group) or simultaneously (= group call) until one member of the group accepts the call.

You can also belong to a team (including executive/secretary ones) in which station numbers are programmed on trunk keys → page 96.

Each member of the group remains available under his or her own station number.

You can activate and deactivate the audible signal for a hunt group, group call or individual trunks in a group (including an executive/secretary team).

If the LED on a programmed "US:Join/leave group UK:Hunt group join/leave" key → page 69 is illuminated, this means that the audible tone was activated for at least one group.

 Special features must be taken into consideration if your telephone operates with HiPath AllServe (system networking via PC network) → page 142!

#### You belong to a hunt group or a group call:

Select and confirm.

	<b>US: Leave group?</b>	<input checked="" type="checkbox"/>
	<b>UK: Leave hunt group?</b>	<input checked="" type="checkbox"/>
		<b>or</b>
	<b>US: Join group?</b>	<input checked="" type="checkbox"/>
	<b>UK: Join hunt group?</b>	<input checked="" type="checkbox"/>

**or**

 **8 5** **or**  **8 5**

Enter the code for "leave" or "join".

**or**



Press the Hunt group join/leave key.

**or**



## Step by Step

▶ **US: Leave group?** ✓  
 ▶ **UK: Leave hunt group?** ✓  
 or

▶ **US: Join group?** ✓  
 ▶ **UK: Join hunt group?** ✓  
 or

**# 8 5** or **\* 8 5**  
 or

  
 or  
 

**301 x group name**  
 or

**301 group name**

**Next?** ✓

▶ **US: Leave group?** ✓  
 ▶ **UK: Leave hunt group?** ✓  
 or

▶ **US: Join group?** ✓  
 ▶ **UK: Join hunt group?** ✓  
 or

▶ **#=Leave all groups?** ✓

**#**  
 or

▶ **\*=Rejoin all groups** ✓

**\***

**You belong to multiple groups or to one group with trunk keys (including executive/secretary teams).**

Select and confirm.

Enter the code for "leave" or "join".

Press the "Hunt group join/leave" key.

If an "x" appears between group/trunk number (such as 301) and group name, the audible tone is active for this group or trunk.

No "x" means that the audible tone was deactivated.

Press the "OK" dialog key to confirm your selection and display the next group or trunk number and group name.

Select and confirm. This turns off the audible tone for the displayed group or trunk.

Select and confirm. This turns off the audible tone for the displayed group or trunk.

Select and confirm. This turns off the audible tone for all groups and trunks.

Enter the code for "Leave all groups".

Select and confirm. This turns off the audible tone for all groups and trunks.

Enter the code for "Join all groups".

Step by Step



If you deactivate the audible tone for another group or trunk, or deactivate it for all groups and trunks to which you belong, a special dial tone sounds when you lift the handset.

## Accepting a Call for Another Member of Your Team

You can accept calls for other telephones in your team from your telephone even while engaged in another call. To do this, contact your service personnel to find out if a pickup group has been configured.

**Precondition:** Your telephone rings briefly. The following message appears on the display: "Call for:".

Pickup - group? ✓  
or

Program/Service ○

\* 5 7

Confirm.

Press the key. The LED lights up.

Enter the code.

## Activating and Deactivating a Ringing Group

You can have calls for your telephone signaled audibly at up to five other internal phones. The person who answers first receives the call.



Special features must be taken into consideration if your telephone operates with HiPath AllServe (system networking via PC network) → page 145!

### Saving, displaying, and deleting telephones for the ringing group:

Program/Service ○

▶ \*81=Ringing group on? ✓  
or

\* 8 1

Press the key. The LED lights up

Select and confirm.

Enter the code.

▶ [ ] ✓

Follow the display prompts (enter the internal station number).

## Step by Step

▶ Ringing group off? ✓  
or

Ⓜ 8 1

### Removing all telephones in call ringing group:

Select and confirm.

Enter the code.


## Step by Step

### Uniform Call Distribution (UCD)

If this function has been configured (contact your service personnel), you belong to a group of users (agents) to whom calls are distributed.

An incoming call is always assigned to the agent who has had the longest break without a call.

#### Logging on and off at the beginning and end of your shift:

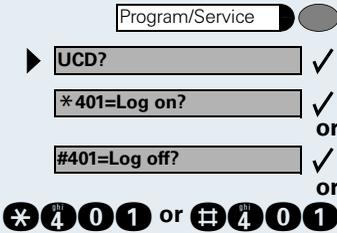

Press the key. The LED lights up

Select and confirm.


Confirm.

Enter the code for "Log on" or "Log off".



To log on, enter your identification number ("Agent:"). Contact your service personnel to find out what it is.

#### Logging on and off during your shift:

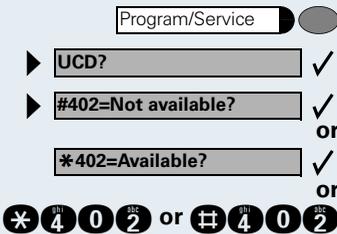

Press the key. The LED lights up

Select and confirm.


Confirm.

Enter the code for "Not available" or "Available".

## Step by Step

### Requesting and activating a work time:

If you want to follow-up on the last call you answered without being disturbed, you can request and activate a work time. This removes your telephone from the call distribution cycle for a programmable period of time until you log back on.

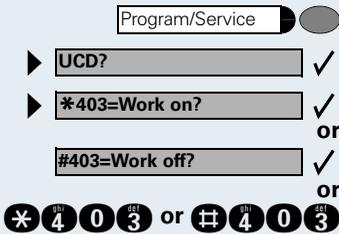


Press the key. The LED lights up.

Select and confirm.

Confirm.

Enter the code for "on" or "off".

### Turning the night service on and off for UCD:

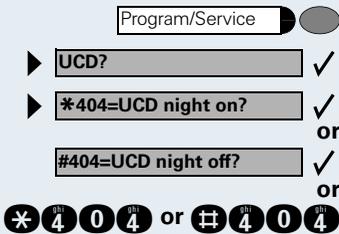


Press the key. The LED lights up.

Select and confirm.

Confirm.

Enter the code for "on" or "off".

### Display the number of waiting calls:

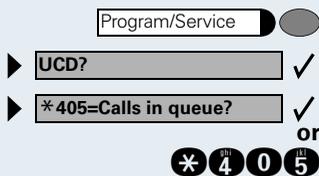

Press the key. The LED lights up.

Select and confirm.

Confirm.

Enter the code for "on" or "off".

Step by Step

# Using Local Applications

## Entering Characters

You can enter text, digits and symbols in local applications in any of the following ways:


- via the keypad on the display – a keypad appears on the display (see below),
- by repeatedly pressing keys on the keypad → page 112 or
- by using an external USB keyboard – connected via the USB interface → page 113.

## Touchscreen Keypad



Show the touchscreen keypad.

Field name and input field in a local application, e.g. "Personal"

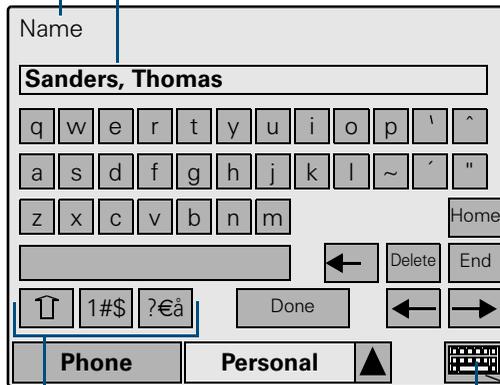

Softkey for showing and hiding the touchscreen keypad

Softkeys for shifting between upper and lower case and shifting to numerical signs, punctuation marks and symbols.

➡ The positioning of the alphanumeric keys depends on the local language settings for the optiPoint 600 office → page 138.

e.g. a b c

Enter alphanumeric characters and symbols.


## Step by Step




Switch to diacritical marks.

The option for entering characters, such as " è ", is active when the relevant softkeys appear on the touchscreen (e.g. " e " is displayed as " è ") and by the inversion of the switching softkey (softkey is black).

In addition to the alphabetical softkeys, the following softkeys are available:

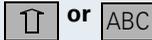

Shift to upper case.

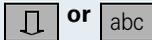

Shift to lower case.



Shift to the first alternative key assignment (e.g. numeric characters, punctuation marks, brackets).



Shift to the second alternative key assignment (e.g. currency symbols).



Place the cursor at the beginning of the line.



Delete characters to the left of the cursor one by one.



Delete characters to the right of the cursor one by one.



Move the cursor to the end of the line.



Move the cursor to the left/right.



Hide the touchscreen keypad and accept the new or modified text in the input field.

Step by Step

Entering Characters via the Keypad

The table shows how to enter characters in a local application's text fields (e.g. in the personal directory → page 114) using the keys on the dialing keypad.

Example: "+" = press the  key 10 times.

Key	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x
	1														
	a	b	c	à	á	â	ä	ç	2						
	d	e	f	è	é	ê	3								
	h	i	ì	í	î	4									
	j	k	l	5											
	m	n	o	ñ	ò	ó	ô	ö	6						
	p	q	r	s	ß	7									
	t	u	v	ù	ú	û	8								
	w	x	y	z	9										
	(1)	0													
	(2)														
	#	*	.	,	:	;	'	"	-	+	=	\$	&	%	@
Key	16x	17x	18x	19x	20x	21x	22x	23x	24x	25x	26x	27x	28x	29x	
	(	)	[	]	<	>	/	\	!	?	~		^	_	

- 1 Space
- 2 Switch from upper case to lower case and vice versa

 In fields that only accept numerical characters, e.g. a call number field, only the digit values associated with a key are entered.  
 Example: Pressing the  key three times produces "333".

## Step by Step

## External Keyboard

Key functions are easy to use with the optional external keyboard.



Toggle between the **Phone tab**, the **Applications tab** and the **Menu key** in the Display menu (for information on the Display menu, see → page 14).



In menus: Switch to the relevant submenu (in the example: to submenu " 1 ", " 2 " or " 3 ").



General: Change the focus\* to the button to the left/right.

In text fields: Move the cursor to the left/right.



General: Change the focus\* to the button above/below.

In lists and list fields: Scroll up/down.



In lists and list fields:  
Jump to the first/last entry.



In text fields: Move the cursor to the start of the line.  
In lists: Jump to the first entry.



In text fields: Move the cursor to the end of the line.  
In lists: Jump to the last entry.



In text fields:  
Edit alphanumeric characters and symbols (in the example: the characters " a ", " 1 " and " % ").



In text fields: Delete characters to the right of the cursor.  
In the caller list: Delete the selected entry.



In text fields: Delete characters to the left of the cursor.



General: Deactivate a selection, cancel the display.  
In menus: Switch to the previous menu level.



General: Execute the selected function.  
In menus: Switch to the submenu of the focussed\* button.

---


\* Focus, focussed:  
Button is "activated", indicated by a surrounding frame.

## Step by Step

## Personal Directory

The Personal function on your optiPoint 600 office enables you to save telephone numbers and further information about other parties, e.g. addresses and fax numbers of calling parties.

Three different call numbers and four additional information items can be entered for each name/entry.

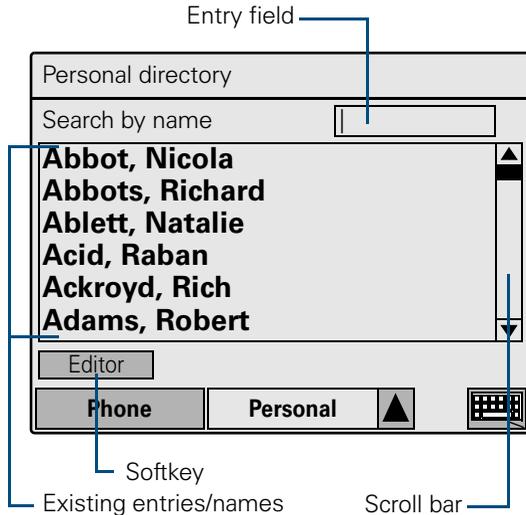

Entries are automatically sorted in alphabetical order. You can search for specific entries.

Directory entries can be exchanged with a PC or LAN server via a USB or LAN interface → page 124 and → page 125.

 For information on dialing from the personal directory, see → page 51.

## Step by Step

## Creating a New Entry

Personal

Click on the Personal tab.  
The personal directory opens.

Editor

Click on the softkey.



If the "Editor" softkey does not appear, press "Cancel", "Menu" or "Exit" until the softkey is displayed.

if necessary



Enter the password (default password: 123456) and confirm with "OK" or .  
To change the password → page 140.

2

or

2

Click on the "Create new entry" menu item or enter the code.

The first page of the two-page "Create directory entry" input form appears .

Create directory entry		1 of 2
Name	<input type="text" value="Sanders, Thomas"/>	
Office	<input type="text" value="089-012345678"/>	Default <input checked="" type="checkbox"/>
Mobile	<input type="text" value="0170-701071170"/>	<input type="checkbox"/>
Private	<input type="text" value="089-876543210"/>	<input type="checkbox"/>
<input type="button" value="Cancel"/> <input type="button" value="Save"/> <input type="button" value="Next"/>		
Phone	Personal	

Softkeys



A

B

C

if necessary



Click on the required field and make your entries (Entering characters → page 110).

Delete characters to the left of the cursor one by one.

### Step by Step

On page 1 you can enter a name and up to three telephone numbers, On page 2 you can enter any additional information such as company and department names.

- "Name" is the only field that may not be left empty. You can enter any combination of letters, numbers and symbols in this field
- The three telephone number fields will only accept certain characters: digits from 0 to 9 and spaces. You can set which of the call numbers entered should be automatically dialed when dialing from the personal directory (default call number) by entering a checkmark beside every call number field → page 51. A checkmark automatically appears when the first call number is entered.
- You can enter any combination of letters, numbers and symbols in the four fields on the second page.
- Captions such as "Name" or "Mobile" can be configured individually → page 127

#### **Saving entries, making additional entries, canceling**

Save

Save the entries you made in the personal directory. The display changes to a blank form for entering a new entry.

Next

On page 1 of 2 only: Display page 2 of the input form for this entry.  
The softkey caption changes to "Previous".

Previous

On page 2 of 2 only: Display page 1 of the input form for this entry.  
The softkey caption changes to "Next".

Cancel

Cancel the display. If you have made any changes, confirmation will be requested.  
The display changes to show the Editor menu.

## Step by Step

## Selecting/Finding an Entry to be Modified or Deleted

**Precondition:** The personal directory contains entries/names with call numbers → page 115.

Personal

Click on the Personal tab.  
The personal directory opens.

Editor

Click on the softkey.

☛ If the "Editor" softkey does not appear, press "Cancel", "Menu" or "Exit" until the softkey is displayed.

if necessary ☛


Enter the password (default password: 123456) and confirm with "OK" or .  
To change the password → page 140.

1 or 1

Click on the "Find existing entry" menu item or enter the code.

☛ The "Find existing entry" option cannot be selected if entries have not yet been created. To create entries, see → page 115.

The search list appears:

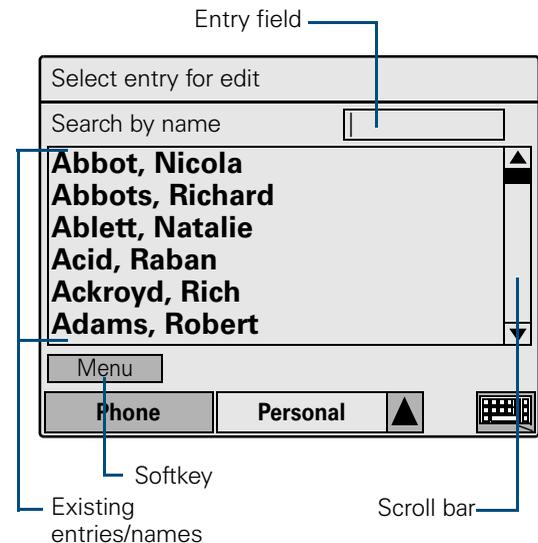

Step by Step



Mark the name you want.  
A scroll bar is displayed if more than six names are saved. You can browse the list by dragging the scroll bar.

or



Enter the name you want or just the initial letters in the "Search by name" field (Entering characters → page 110); the selected entry is highlighted inversely).  
Every letter entered narrows down the selection. Up to six of the names found are displayed at a time.

if necessary 

Delete the letters to the left of the cursor one by one.

**Selecting an entry will display the following soft-keys:**



The display changes to the Editor menu.

Cancel the current selection and empty the input box.

Open the selected entry for editing → page 119.

## Step by Step

## Editing/Deleting/Changing an Entry

**Precondition:** You have marked an entry/name and clicked on the "Edit" softkey → page 51 or → page 117.

The name is displayed with all additional information:



Softkeys

### Canceling an entry

Cancel

Cancel display.

The display changes to the directory list → page 51 or the search list → page 117.

### Deleting an entry

Delete

Delete the selected entry after checking for confirmation.

Once the entry has been deleted, the display changes to the directory list → page 51 or the search list → page 117.

For information on deleting all entries in the personal directory, see → page 123.

Step by Step

Change

Changing an entry

Click on the softkey.

The first page of the two-page "Change directory entry" input form appears.

Softkeys



if necessary

Click on the required field and make your changes (Entering characters → page 110).

Delete characters to the left of the cursor one by one.

On page 1 you can change the name and up to three telephone numbers, On page 2 you can change any additional information such as company and department names.

The procedure is the same as for creating a new entry → page 116.

## Step by Step

### The following softkeys are available:

Menu

Cancel the display. If you have made any changes, confirmation will be requested.  
The display changes to Editor-menu.

Cancel

Cancel the display. If you have made any changes, confirmation will be requested.  
The display changes to the directory list → page 51 or the search list → page 117.  
Otherwise, the "Selected entry is:" display appears.

Save

Save changes to data (page 1 and 2 of the form). This softkey is only available if changes have actually been made.  
The display goes to the "Personal Directory Options" → page 51 or the search list → page 117.

Next

On page 1 of 2 only: Display page 2 of the form.  
The softkey caption changes to "Previous".

Previous


On page 2 of 2 only: Display page 1 of the form.  
The softkey caption changes to "Next".

## Step by Step

## Displaying an Entry

**Precondition:** You have marked an entry/name and clicked on the "Details" softkey → page 51.

The first page of the two-page "Directory entry details" appears showing detailed information.

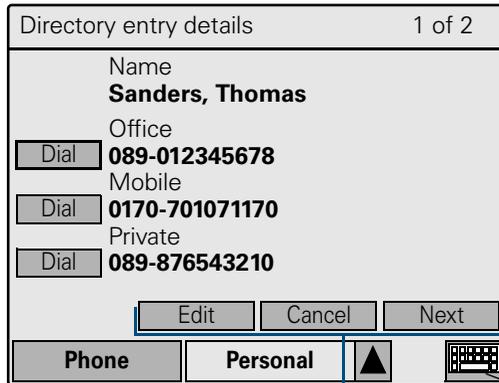

Softkeys

Page 1 shows the name and a maximum of three telephone numbers, Page 2 shows any additional information such as company and department names.

**The following softkeys are available:**

Dial

On page 1 of 2 only: Dial one of the numbers listed in this entry.

The display changes to "Phone" → page 14.

Edit

For information on editing the entry displayed, see → page 119.

Cancel

Cancel the current selection.

The display changes to the directory list → page 51.

Next

On page 1 of 2 only: Show the second page of details for this entry.

The softkey changes to "Previous."

Previous

On page 2 of 2 only: Show the first page of details for this entry. The softkey changes to "Next".

## Step by Step

Personal

Click on the Personal tab.  
The personal directory opens.

Editor

Click on the softkey.



If the "Editor" softkey does not appear, press "Cancel", "Menu" or "Exit", until the softkey is displayed.

if necessary



Enter a password (default password: 123456) and confirm with "OK" or .  
To change the password → page 140.

3 or 3

Click on the menu item "Statistics" or enter the code.  
The number of directory entries available is displayed.

## Deleting all Entries

You can delete all the entries in your personal directory at once. Changed captions → page 127 will remain unaffected.

To delete individual entries in the personal directory, see → page 119.

Service

Click on the Service tab.

2 or 2

Click on the menu item "Personal Options" or enter the code.

if necessary



Enter a password (default password: 123456) and click "OK". To change the password → page 140.

1 or 1

Click on the menu item "Personal Directory Options" or enter the code.

2 or 2

Click on the menu item "Delete all entries" or enter the code.

OK

Click on the softkey in the dialog box.

The display changes to the "Personal Directory Options" menu.

## Step by Step

### Importing or Exporting a Personal Directory via USB

You can transfer all your personal directory entries from your PC to your optiPoint 600 office and use your optiPoint 600 office to save these entries on your PC.

**Preconditions:** A USB connection\* is active between the PC and your optiPoint 600 office and the "ENB Update Tool comfort" program was installed and configured by yourself or the service personnel.



The "ENB Update Tool" program and a detailed description of how to transfer data can be downloaded from the Internet page [www.hipath.com](http://www.hipath.com).

---

---

\* USB cable part number: S30267-Z360-A30-1, the necessary USB driver (included in the "CallBridge TU" program) is available at the following Internet address: [www.hipath.com](http://www.hipath.com).

## Step by Step

## Importing/Exporting the Personal Directory via LAN

You can transfer all personal directory entries from a server in your LAN to your optiPoint 600 office and use your optiPoint 600 office to save these entries on the LAN server.

**Precondition:** LAN-based transmission must have been configured correctly → page 126.

Service

Click on the Service tab.

2 or 2

Click on the menu item "Personal Options" or enter the code.

if necessary 

Enter a password (default password: 123456) and click "OK". To change the password → page 140.

1 or 1

Click on the menu item "Personal Directory Options" or enter the code.

3 or 3

Click on the menu item "Directory transfer" or enter the code.

2 or 2

Click on the menu item "Transfer via LAN" or enter the code.

1 or 1

To **import** data **into optiPoint 600 office**, click on the menu item "Import Directory" or enter the code.

or

2 or 2

To **export** data **from optiPoint 600 office**, click on the menu item "Export Directory" or enter the code.

Wait until all data has been transferred.

OK

Click on the softkey, to apply the changes.

The display changes to the menu "Directory transfer."

Step by Step

Settings for data transfer via LAN



Incorrect settings for the transfer of data via LAN will cause problems when importing and exporting personal directory data → page 124!

Service

Click on the Service tab.

2 or 2

Click on the menu item "Personal Options" or enter the code.

if necessary



Enter a password (default password: 123456) and click "OK". To change the password → page 140.

1 or 1

Click on the menu item "Personal Directory Options" or enter the code.

3 or 3

Click on the menu item "Directory transfer" or enter the code.

3 or 3

Click on the menu item "Directory server details" or enter the code.

0 ... 9

Enter the IP number of the server with which a LAN connection has been established.

A B C

Enter the pathname to the CSV file on the server.

Next

Click on the softkey to display the next page.

A B C

Enter user account.

A B C

Enter password.

A B C

Enter user name.

Save

Click on the softkey to conclude the process.

The display changes to the menu "Directory transfer".

## Step by Step

## Changing Captions

You can change the captions such as "Name" or "Mobile" that designate the details of a directory entry  
→ page 122.

Service

Click on the Service tab.

2 or 2

Click on the menu item "Personal Options" or enter the code.

if necessary

1 or 1

Enter the password (default password: 123456) and click "OK". To change the password → page 140.

1 or 1

Click on the menu item "Personal Directory Options" or enter the code.

The form for changing captions is a two-page display.

Personal directory structure		1 of 2
Field	Field name	
Name	<input type="text" value="Name"/>	
Number (1)	<input type="text" value="Office"/>	
Number (2)	<input type="text" value="Number (2)"/>	
Number (3)	<input type="text" value="Number (3)"/>	
<input type="button" value="Cancel"/> <input type="button" value="Save"/> <input type="button" value="Next"/>		
Phone	Personal	<input type="button" value="▲"/> <input type="button" value="☰"/>

Sofkeys

On page 1 you can change the captions of the name field and three number fields, and on page 2 you can change the captions of four more fields.

A B C

Click on the required field and make your changes (Entering characters → page 110).

### Step by Step

Cancel

#### **The following softkeys are available:**

Cancel the display. If you have made any changes, confirmation will be requested.

The display changes to the "Personal Directory Options" menu.

Save

Save changes to data (page 1 and 2 of the form). This softkey is only available if changes have actually been made.

The display goes to the "Personal Directory Options" menu.

Next

On page 1 of 2 only: Display page 2 of the form. The softkey caption changes to "Previous".

Previous

On page 2 of 2 only: Display page 1 of the form. The softkey caption changes to "Next".

## Step by Step

## Corporate Directory

The "Corporate" application's start display features a search mask which provides a simple and user-friendly means of finding and directly dialing entries in your corporate directory (fast search → page 53).

Input field for the fast search



Softkeys

Opens the advanced search → page 130

You can use additional properties to find a specific entry/name with the advanced search → page 130.

Step by Step

Corporate



### Advanced Search

In comparison to the fast search → page 53 the advanced search provides options for searching on the basis of additional corporate directory fields (max. 5).

Click on the Corporate tab.  
The corporate directory opens.

Click on the softkey beside "Advanced search".

The advanced search appears:

Input fields for the advanced search

Softkeys

The layout of the search mask can be modified (ask the service personnel).

If a search string was already entered in the fast search input field → page 53, this appears to the first of the two fields when advanced search activated.

A B C

Enter the search strings you want to find or just the first letters in the input fields (Entering characters → page 110).

if necessary

Delete the letters to the left of the cursor one by one.

The " \* " character is used as a wildcard in the input field. Entries are not case-sensitive.

Example: The search strings "miller" and "p\*" will provide the hits "Miller, Peter" and "Miller, Paul".

**The following softkeys are available:**

## Step by Step

Cancel

Cancel the display.  
The display changes to fast search → page 129.

Delete

Delete the texts in the input fields (apart from the default entries " \* ").

Browse

Start the advanced search → page 132.


Step by Step

**Displaying results**

"Searching" appears in the top right of the display when the search is running. The search can be interrupted at any time with "Cancel".

 An appropriate message is displayed in the event of problems with the search or if the search did not produce any hits.

The following list appears if the search produced one or more hits:

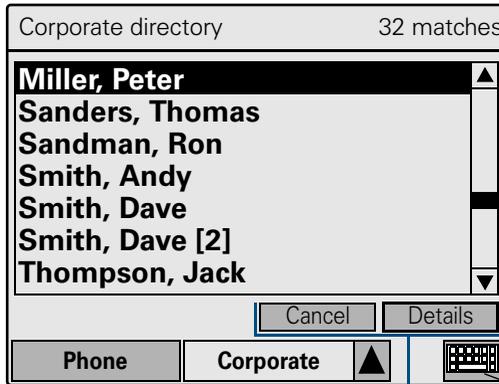

Softkeys

If the search string matches over 100 entries, only the first 100 entries and a corresponding message are displayed.

The directory list shows the selected entry in reverse video.

**Selecting an entry will display the following softkeys:**

Cancel

Cancel the display.  
The display changes to the advanced search input form → page 130.

Details


Display detailed information on an entry that supports call number dialing → page 133.

## Step by Step

## Displaying an entry

**Precondition:** You have marked an entry/name and clicked on the "Details" softkey → page 51 or → page 133.

The first page of the two-page "Corporate directory" appears showing detailed information.

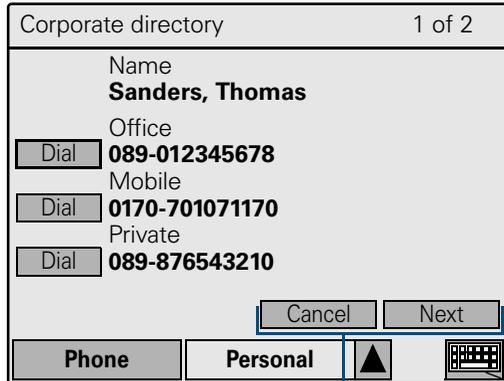

Softkeys

Page 1 shows the name and max. three call numbers. Page 2 show additional information, where applicable, such as company name and department.

### Selecting an entry will display the following softkeys:

Dial

On page 1 of 2 only: Dial the call number associated with an entry.

The display changes to "Phone" → page 14.

Cancel

Cancel the current selection.

The display changes to the hit list → page 132.

Next

On page 1 of 2 only: Display the second page of the entry's detailed information.

The softkey changes to "Previous".

Previous

On page 2 of 2 only: Display the first pages of the entry's detailed information. The softkey changes to "Next".

Step by Step

## WAP Browser

The "Web access" application provides access to information on the corporate intranet.

The WAP browser can be password-protected on your optiPoint 600 office. For information on enabling, changing or disabling password protection, see → page 140.

A suitable user name and password may be necessary for accessing the contents of the WAP browser → page 141.


Click on the Web access tab.

Web access  
**if necessary** 

Enter the password (default password: 123456) and confirm with "OK". To change the password → page 140.

As the layout and contents of the pages available in the WAP browser are freely programmable, the pages shown here are only examples.

WAP browser page contents

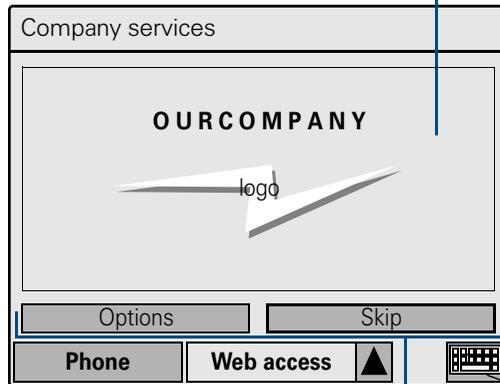

Softkeys

Apart from the default softkey ("Options"), the softkeys change depending on the contents of the WAP pages programmed.

To display options → page 135.

Options

## Step by Step

### WAP browser Options menu

The following functions can be performed on every WAP page via the WAP browser's Options menu (example):

1

**Back**

Show the previously displayed page (move backwards in the navigation history).

2

**Home**

Show the WAP page set as the "homepage"  
→ page 134.

3

**Refresh**

Reload the current WAP page.

4

**Show URL**

Show the URL (WAP address) of the current page. "OK" terminates the URL display.

if necessary

5

**More ...**

Show more functions in a separate Options submenu.

Cancel

Cancel the Options menu.

The display changes to the previous WAP page or, in the case of multiple menu levels, to the previous menu level (reached via "More ...").

## Step by Step

### Local Settings

Besides options for personal directory settings (→ page 123 onwards), the "Service" application features options for making optiPoint 600 office-specific settings.

For other telephone settings, please see → page 62.

### Adjusting the Display Contrast

You can adjust the display contrast to any of nine levels to suit your individual lighting conditions.

Service

Click on the Service tab.

1 or 1

Click on the menu item "Phone control" or enter the code.

2 or 2

Click on the menu item "Display settings" or enter the code.

1 or 1

Click on the menu item "Contrast level" or enter the code.

<< or >>

Click on the softkey.

Save

Click on the softkey.

## Step by Step

## Calibrating the Touchscreen

By calibrating the touchscreen of your optiPoint 600 office you can customize the dimensioning and alignment between your input and the image on the display. This helps to eliminate problems in operation such as those caused by parallax.

Service

Click on the Service tab.

1 or 1

Click on the menu item "Phone control" or enter the code.

2 or 2

Click on the menu item "Display settings" or enter the code.

2 or 2

Click on the menu item "Touchscreen calibration" or enter the code.



Click on item 1.



Click on item 2.



Click on item 3.

Save

Click on the softkey in the dialog box.

Step by Step

### Selecting your Operating Language

You can change the language of the menus and text output in local applications.

The following languages can be selected (language group A):

- US English
- French
- German
- Italian
- Spanish

---

 Displays on the "Administration" menu are only available in English.

---

Service

1 or 1

Click on the Service tab.

Click on the menu item "Phone control" or enter the code.

3 or 3

Click on the menu item "Language selection" or enter the code.

▼

Click on the drop-down list and choose a language.

Save

Click on the softkey.

You will also see the following information on the display:

- Language set for the telephony dialog of the communication platform.
- Language recommended for the applications on the basis of the language used in the telephony dialog.
- Language type used by the external USB keyboard → page 113, if it has been detected.

## Step by Step

## Selecting a Language for the External Keyboard

Your optiPoint 600 office tries to automatically detect the language type used by the external keyboard connected via USB → page 113. If this is not possible, you can set the keyboard language manually.

The following languages can be selected (language group A):

- UK English
- US English
- German
- Spanish
- Italian
- French

Service

Click on the Service tab.

1 or 1

Click on the menu item "Phone control" or enter the code.

4 or 4

Click on the menu item "USB keyboard selection" or enter the code.

▼

Click on the drop-down list and choose a language.

Save

Click on the softkey.

## Changing the Display Reset Time

You can specify whether, and if so, after what period of time the display should return to its standard setting (Phone tab → page 14), switching off the display illumination, without any action by the user.

Service

Click on the Service tab.

1 or 1

Click on the menu item "Phone control" or enter the code.

5 or 5

Click on the menu item "Inactivity timeout" or enter the code.

▼

Click on the drop-down list and choose a period or deactivate the one selected.

Save

Click on the softkey.

Step by Step

### Setting a Password for Personal Options

You can change or delete the default password for accessing the "Personal Options" areas and the directory editor.  
If a password is not set, password-protection is not enabled for these areas.

 If you have forgotten your password, the default password can be reset (ask the service personnel).



Click on the Service tab.

 or 

Click on the menu item "Personal Options" or enter the code.

**if necessary** 

Enter a password (default password: 123456) and click "OK".

 or 

Click on the menu item "Personal Password" or enter the code.



If a password has previously been set:  
Enter the old password.



Enter a new password. Maximum length 24 digits.



Repeat the new password.



Click on the softkey, to apply the changes.

The display changes to the "Personal Options" menu.

## Step by Step

## Setting Web Access Parameters

If WAP server access is password-protected, you must enter the access data here.

 Service

Click on the Service tab.

 or 

Click on the menu item "Personal Options" or enter the code.

**if necessary** 

Enter a password (default password: 123456) and click "OK".

 or 

Click on the menu item "Web access settings" or enter the code.

Enter the user name.



Enter the password.

 OK

Click on the softkey, to apply the changes.

The display changes to the "Personal Options" menu.

Step by Step

# Special Function in the LAN (PC Network)

If your telephone is operating in a HiPath AllServe environment, multiple HiPath 3000 are interconnected via a LAN (Local Area Network, e.g. proprietary PC network). Your telephone calls are conducted via the LAN (PC network).

If this is the case, you must take certain special features into consideration when performing various functions. These are described below.

## Leaving a Hunt Group/Group Call

**Precondition:** you belong to a hunt group/group call  
→ page 104 of another HiPath 3000:

▶ Internal DISA? ✓  
or

\* 4 0 7

Select and confirm.

Enter the code.



Enter the (DISA) call number of the other HiPath 3000.

✓ or #

Confirm the entry.



Enter the (DISA) call number of your telephone.

✓ or #

Confirm the entry.

▶ Leave hunt group? ✓  
or

▶ Join hunt group? ✓  
or

# 8 5 or \* 8 5

Select and confirm.

Enter the code for "leave" or "join".

### You belong to multiple groups of another HiPath 3000:



Enter the group number for "Join/Leave, directed".

## Step by Step

## Transferring Call Forwarding

You can activate/deactivate call forwarding → page 77 for your telephone from other HiPath AllServe telephones.

▶  ✓  
or



Select and confirm.

Enter the code.



Enter the (DISA) call number of the HiPath 3000 to which your telephone is connected.

✓ or

Confirm the entry.



Enter the (DISA) call number of your telephone.

✓ or

Confirm the entry.

#### Activating this function:

▶  ✓  
or



Select and confirm.

Enter the code.

✓  
or

▶  ✓  
or

▶  ✓  
or

or or

Select and confirm.

Enter the code.



Enter the destination number.

✓

Confirm.

#### Deactivating this function:

▶  ✓  
or



Select and confirm.

Enter the code.

## Step by Step

### Using Night Answer

If authorized (contact your service personnel), you can define telephones in other HiPath 3000 communications platforms as the night answer → page 78.

▶  ✓  
or



Select and confirm.

Enter the code.



Enter the (DISA) call number of the HiPath 3000 to which the night answer telephone is connected.

✓ or

Confirm the entry.



Enter the (DISA) call number of the telephone from which you wish to activate/deactivate the night answer service.

✓ or

Confirm the entry.

#### Activating this function:

▶  ✓  
or



Select and confirm.

Enter the code.



Enter the destination number (= temporary night answer).

✓

Confirm.

#### Deactivating this function:

▶  ✓  
or



Select and confirm.

Enter the code.

## Step by Step

## Activating and Deactivating a Ringing Group

You can have calls for your telephone signaled audibly at external telephones or at telephones in other HiPath 3000 communications platforms → page 106.

### Saving the telephones for the ringing group:

- Program/Service  Press the key. The LED lights up.
- ▶  ✓ Select and confirm.  
or
-  \* 8 1 Enter the code.
- ✓ Select and confirm  
or
- ▶  ✓
- ▶  ✓ Select and confirm, then follow the operating instructions.
-  Enter the call number.
- ▶  ✓ Confirm.  
or
-  Enter.
- ✓ Confirm.
- ▶  ✓ Select and confirm.
- ### Removing all telephones in call ringing group:
- ▶  ✓ Select and confirm.  
or
-  \* 8 1 Enter the code.

## Step by Step

### Controlling Relays

If this feature is configured (contact your service personnel), you can also control relays → page 93 in other HiPath 3000 communications platforms.

▶ **Internal DISA?** ✓  
or

\* 4 7

Select and confirm.

Enter the code.



Enter the (DISA) call number of the HiPath 3000 in which the relay is to be controlled.

✓ or



Confirm the entry.



Enter the (DISA) call number of the telephone from which you wish to control the relay.

✓ or



Confirm the entry.

▶ **\*90=Control Relay On?** ✓  
or

▶ **#90=Control Relay Off?** ✓  
or

\* 9 0 or # 9 0

Select and confirm.

Enter the code for "on" or "off".

1 ... 4

Enter the relay.

## Step by Step

## Opening the Door

If this feature is configured (contact your service personnel), you can also activate the door opener → page 28 in other HiPath 3000 communications platforms.

▶ **Internal DISA?** ✓  
or



Enter the code.



Enter the (DISA) call number of the HiPath 3000 in which the door is to be opened.

✓ or

Confirm the entry.



Enter the (DISA) call number of the telephone from which you wish to activate the door opener.

✓ or

Confirm the entry.

▶ **Open door?** ✓  
or



Enter the code.



Enter the call number of the entrance telephone.

# Labeling, Documentation and Accessories


## Labeling Key Fields

You can choose from the following options to label the keys with the functions/call numbers saved (→ page 10, → page 67):

### Labeling

- by hand:  
Labeling strips are delivered with your optiPoint. Write the function or a name on the matching strips within the white field and attach them to your optiPoint.
- with a computer:  
You have available a CD Rom (ask the service personnel) with the electronic operating instructions for your HiPath 3000/HiPath AllServe → page 149. You can label your keypads for each PC.
- with a computer via the Internet:  
You will find the "Online Key Labelling Tool" along with the user interface under <http://www.hipath.com> → "Downloads" → "Software".  
Special labeling sheets, which can be ordered, are available with the corresponding labeling strips for this procedure.  
Labeling sheets can be ordered from the details of the article number from Siemens' Sales Organization or via the following internet address:  
<http://www.click4business-supplies.de>  
Article number-labeling sheets:  
A31003-H8400-B993-\*-6Z19  
for optiPoint basic/standard/advance paper size - DINA4  
A31003-H8400-B992-\*-6Z19  
for optiPoint key module paper size - DINA4

Put the labeled strips in the relevant key pad on your optiPoint and place the transparent cover over them (mat page above).

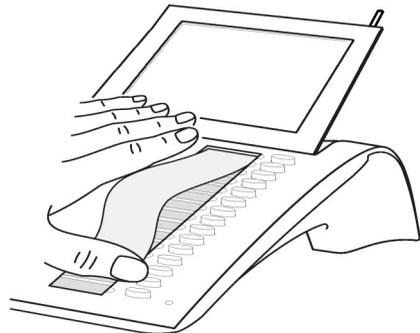

## Attaching a Station Number Label

Self-adhesive call-number labels are also delivered with your optiPoint.

Write on the call-number label (fire brigade, police, own telephone numbers), then remove and stick it in the recess on the telephone when the handset is lifted.

## Documentation

You can find these operating instructions in the Internet in PDF format under

<http://www.hipath.com>

and on CD-ROM (ask the service personnel) in HTML and PDF format.

The CD-Rom (7 languages) or a printout of these operating instructions can be ordered from the details of the article number from Siemens' Sales Organization of via the following Internet address.

<http://www.click4business-supplies.de>

CD-ROM article number:

P31003-H1012-C130-\*-6Z19

Article number of these operating instructions:

A31003-H1012-C125-1-7619

In order to look at and print the operating instructions in PDF format, you need a computer on which the free Acrobat Reader software package is installed by Adobe.

To look at the operating instructions in HTML format you need a computer with a www browser, e.g. Microsoft Internet Explorer.

## Accessories

The following accessories help you customize your telephone to your individual preferences. optiPoint adapters are modules which can be plugged into the option bays at the bottom of optiPoint.

**optiPoint key module:**

Key module with 16 programmable keys. You can connect up to two key modules to your telephone.

**optiPoint BLF:**

Key modules with 90 LEDs and function keys. Use preferably in conjunction with optiPoint Attendant.

**optiPoint acoustic adapter:**

Connects a desk microphone, Headset, external speaker or second handset.

Provides an additional bell for signaling calls in loud environments and similar situations and controls illuminated display panels, such as "Please do not enter" at the entrance to a room.

**optiPoint analog adapter:**

Connects an additional analog telephone, fax machine or PC with a modem card.

**optiPoint ISDN adapter:**

Connects an ISDN device, such as an ISDN fax machine, video recorder or PC to the S<sub>0</sub> interface.

**optiPoint phone adapter:**

Connects a second system telephone. Callers can reach the second system telephone under a separate station number.

**optiPoint recorder adapter:**

Connects an external recorder or a second headset.

**Headset:**

Headset for frequent telephone users.

**Second handset:**

Allows you to hear better in noisy environments.

**Desk microphone:**

For speakerphone mode under poor acoustic conditions.

**External speaker:**

Improves the sound quality with open listening.



You will find details about the individual products in your optiPoint telephone data sheets.

---

## Fixing Problems

### Telephone Maintenance

- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use cleaners containing alcohol, cleaners that corrode plastic, or abrasive powders.

### Troubleshooting

#### **Pressed key does not respond:**

Check whether the key is stuck.

#### **Telephone does not ring:**

Check whether the do not disturb function was activated on your telephone ("Do not disturb" appears on the screen). If so, deactivate it → page 25.

#### **You cannot dial an external number:**

Check whether your telephone is locked ("US:Not authorized UK:Access denied" appears on the screen). If so, unlock the telephone → page 65.

#### **No LDAP or WAP functionality, lamps (key LEDs) do not shine or the external keyboard has no function:**

Check whether the plug-in power supply unit is plugged in (except connection by HFA with "power over LAN").

#### **To correct any other problem:**

First contact service personnel. If service personnel is unable to correct the problem, contact Customer Service.

## Step by Step

**US: Invalid entry**

**UK: Incorrect entry**

### Responding to Error Messages on the Screen

**Possible cause:**

The station number is incorrect.

**Possible response:**

Enter a correct station number.

**US: Not authorized**

**UK: Access denied**

**Possible cause:**

You tried to activate a disabled function.

**Possible response:**

Ask the service personnel to authorize you to use the function.

**US: Currently not possible**

**UK: Feature not available**

**Possible cause:**

The station number you dialed does not exist. The telephone you are trying to call is unplugged.

**Possible response:**

Enter a correct station number. Try calling the telephone again later on.

**US: Invalid station number**

**UK: Number cannot be dialed**

**Possible cause:**

You dialed your own station number.

**Possible response:**

Enter a correct station number.

**US: Key memory is full**

**UK: Max.no.of keys exceeded**

**Possible cause:**

All memory locations for external station numbers are currently in use.

**Possible response:**

Try again later on.

## Step by Step

### Restart the Telephone

Other errors (e.g. the display shows "System forced logoff") can be repaired sometimes by restarting the telephone.



Press the keys simultaneously and follow further prompting.

### Contacts for Resolving Problems

If you encounter a problem that lasts longer than five minutes, contact ask the service personnel.

# Index

## A

accessories .....	150
account code .....	58
activating door opener .....	28
adapter .....	150
advisory message .....	83
agents .....	108
announcement .....	33
answering a timed reminder .....	24
answering machine .....	86
call pickup .....	29
appointment .....	74
assigning a DID number .....	35
assigning available keys .....	67
assigning programmable keys .....	67
associated dialing/dialing aid .....	37
Attention Ring Vol .....	63
automatic connection setup .....	34
automatic line seizure .....	31

## C

calibrating the touchscreen display .....	137
call	
accepting from answering machine .....	29
accepting in a team .....	102
accepting, group .....	106
answering .....	18
forwarding .....	77
forwarding in a team .....	99
forwarding MSN in CO .....	79
in a team with trunk keys .....	97
parking .....	43
pickup, directed .....	22
placing on hold .....	44
rejecting .....	23
retrieving from park .....	43
retrieving held .....	44
transfer .....	102
transfer after announcement .....	41
using DSS keys in a team .....	101
call charge assignment .....	58
call charges for another telephone .....	56
call charges for your telephone .....	56

call forwarding .....	77
MSN in CO .....	79
call request .....	45
call signal .....	18
call transfer .....	41
call waiting	
accepting .....	20
allowing .....	21
preventing .....	21
call waiting (camp-on)	
tone off .....	22
call waiting (camp-on) .....	60
call waiting on/off .....	22
call waiting tone on/off .....	22
caller ID	
restoring display of	
suppressing display of caller ID .....	33
caller ID suppression .....	33
calling	
entrance telephone .....	28
calling a second party .....	38
calls	
distributing .....	108
calls in queue .....	30, 108
CE mark .....	2
change call number .....	85
charges for another telephone .....	56
charges for your telephone .....	56
checking the key assignments .....	76
cleaning the telephone .....	151
code dialing in ISDN .....	91
codes .....	13
conducting calls with a headset .....	25
conference .....	39
connection setup, automatic .....	34
consultation hold .....	38
contacts/problems .....	153
corporate directory .....	53

## D

deleting advisory messages .....	83
desk microphone .....	150
details, fax .....	86
dial input editing .....	32

dialing

- en-bloc ..... 32
- from the caller list ..... 47
- from the corporate directory ..... 53
- from the internal directory ..... 49
- from the personal directory ..... 51
- internal/external calls ..... 31

dialing a number

- with repertory dialing keys ..... 55

dialing aid

- SO-bus ..... 37

dialing internal calls ..... 31

dialing numbers

- using speed-dialing ..... 55

Direct Inward System Access ..... 89

direct station select ..... 68, 70, 101

directory, corporate

- advanced search ..... 130
- displaying results ..... 132
- fast search ..... 53

directory, internal ..... 49

directory, personal ..... 114

- changing an entry ..... 120
- changing captions ..... 127
- deleting all entries ..... 123
- displaying an entry ..... 122

entry

- creating ..... 115
- deleting/changing ..... 119
- displaying ..... 133
- selecting/finding ..... 117

importing/exporting

- via a USB direct connection ..... 124
- via LAN (PC network) ..... 125

number of entries ..... 123

DISA ..... 89

display ..... 10, 14

- adjusting contrast ..... 136
- adjusting the reading angle ..... 64
- calibrating ..... 137
- illumination ..... 64
- selecting operating language ..... 138
- setting reset time ..... 139

display, touchscreen ..... 10

distributing calls ..... 108

do not disturb ..... 25

door opener ..... 29

**E**

- editing dial inputs ..... 32
- editing the station number ..... 32
- en-bloc ..... 32
- enhanced paging equipment ..... 94
- entrance telephone ..... 28
- error messages ..... 152
- executive/secretary functions ..... 96
- external code ..... 31

**F**

- fax details ..... 86
- forwarding ..... 77

  - multiple subscriber number (MSN) ..... 79

- forwarding MSN in CO ..... 79
- forwarding multiple subscriber number (MSN) ..... 79
- function keys ..... 13
- functions

  - activating/deactivating for another telephone associated service ..... 88
  - assigning to keys ..... 69
  - programming on keys ..... 69
  - resetting ..... 86

**G**

- group call ..... 104

  - in a team ..... 102

**H**

- handsfree answerback ..... 24

  - off ..... 25
  - on ..... 25

- headset ..... 25, 150
- HiPath AllServe

  - actuators ..... 146
  - group call ..... 142
  - hunt group ..... 142
  - night answer ..... 144
  - opening the door ..... 147
  - relays ..... 146
  - ringing group ..... 145
  - transferring call forwarding ..... 143

hotline .....	34
HTML format .....	149
hunt group .....	104

**I**

internal directory .....	49, 51
IP telephony .....	142

**K**

key fields, labeling .....	10, 148
keyboard, external	
selecting the language .....	139
keypad dialing .....	91
keys	
assigning .....	67
fixed .....	10
incomplete save .....	69
labeling .....	148
programmable .....	10

**L**

labeling key fields .....	10, 148
LAN telephony .....	142
language selection	
for the external USB keyboard .....	139
LDAP directory .....	53
leaving an advisory message .....	83
LED (light-emitting diode) .....	10
LED indications, meaning of ....	96, 100, 101
LED signals, meaning .....	70
local application .....	15
locking	
all phones .....	89
locking all phones .....	89
locking/unlocking the telephone .....	65

**M**

mailbox .....	23
making calls	
on-hook dialing .....	31
to stored destinations .....	45
using redial .....	45
with the dialing aid .....	37
making external calls .....	31

making trunk calls .....	31
malfunctions .....	151
meaning of LED indications ....	96, 100, 101
meaning of LED signals .....	70
message	
answering .....	82
deleting/displaying .....	80
receiving .....	82
sending .....	80
microphone for speakerphone mode ....	10
monitoring	
silent .....	87
MULAP keys .....	96
MULAP trunk keys .....	96

**N**

night answer .....	78
notes .....	2

**O**

open listening .....	19
opening door .....	28
with a code .....	29
operating instructions	
HTML format .....	149
ordering .....	149
PDF format .....	149
operating principle .....	12
operating steps	
assigning to a key .....	72
optiPoint adapter .....	150
overload .....	30
override .....	61, 87

**P**

parking a call .....	43
PDF format .....	149
personal directory .....	114
personal directory statistics .....	123
personal identification number .....	66
pickup (call) .....	22, 106
PIN .....	66
for a telephone .....	65
placing a call on hold .....	44
in a team .....	97

- preventing and allowing  
 automatic camp-on ..... 21  
 Prime Line on ..... 31  
 problems/contacts ..... 153  
 procedure  
   assigning to a key ..... 72  
 programming available keys ..... 67  
 programming keys ..... 67  
 programming your telephone ..... 62  
 project calls ..... 58
- R**
- radio paging equipment PSE ..... 94  
 recall ..... 42  
 redialing a number ..... 45  
   via the caller list ..... 47  
 relays ..... 93  
 relocate ..... 85  
 reserving a trunk ..... 35  
 reset services ..... 86  
 resetting services resetting functions ... 86  
 ring tone ..... 62  
 ring transfer  
   in an executive/secretary team ..... 103  
 ring volume ..... 62  
 ringer cutoff ..... 26  
 ringing group ..... 106  
 room monitor ..... 87
- S**
- saving a PIN ..... 66  
 second level ..... 55, 67  
 secretary functions ..... 96  
 sensors ..... 93  
 setting your telephone ..... 62  
 Shift ..... 55, 67  
 Shift key ..... 55, 67  
 silent monitor ..... 87  
 simple paging equipment ..... 94  
 speaker ..... 18  
 speaker call ..... 33  
 speakerphone mode ..... 18, 19, 20, 63  
 special dial tone ..... 25
- speed-dialing  
   dialing numbers ..... 55  
   saving station speed-dialing ..... 68  
   system ..... 55  
 station number  
   assigning ..... 35  
   correcting ..... 32  
   saving ..... 67  
 station speed-dialing ..... 55, 68  
 status information ..... 15  
 suffix-dialing ..... 34  
 switches ..... 93  
 system speed-dialing ..... 55  
 system-wide cancellation ..... 86
- T**
- team with trunk keys ..... 96  
 telephone  
   cleaning ..... 151  
   locking ..... 65  
   locking another ..... 89  
   locking/unlocking ..... 65  
   locking/unlocking all phones ..... 89  
   maintaining ..... 151  
   operating ..... 12  
   settings ..... 62  
   testing ..... 75  
   using another like your own ..... 84  
 telephone data service ..... 92  
 telephone maintenance ..... 151  
 telephone tab ..... 14  
 telephone test ..... 75  
 telephony dialog ..... 14  
 temporary phone  
   using a temporary phone ..... 84  
 testing the telephone ..... 75  
 testing the telephone functions ..... 75  
 text message  
   answering ..... 82  
   deleting/displaying ..... 80  
   receiving ..... 82  
   sending ..... 80  
 three-party conference ..... 39  
 time-dependent hotline ..... 34  
 toggle ..... 38

toggle/connect	
in the team .....	98
tone dialing .....	34
tone dialing (DTMF dialing) .....	34
touchscreen	
calibrating .....	137
trace call .....	26
transfer (call) .....	41, 102
after announcement .....	41
trunk flash .....	36
trunk keys in a team .....	96
trunk keys, MULAP .....	96
trunk, reserving .....	35

**U**

UCD .....	108
using a caller list .....	45
using functions from the outside .....	89

**V**

variable call forwarding .....	77
--------------------------------	----

**W**

waiting calls .....	30
WAP browser .....	134
Options menu .....	135
work time .....	109

## Overview of Functions and Codes (Alphabetical)

The table below lists all available functions as they appear on the display. Functions that have been configured (contact your service personnel) can be activated interactively (select + save) via the Program/Service menu (select + save or enter a code), or by pressing function keys, provided that the functions have been configured (contact your service personnel).

Functions (display)	... Inter-actively 	... Via the Program/Service menu		... With function keys
			Code 	
Account code		✓	*60	X
Advisory msg. on	✓	✓	*69	X
Advisory msg. off	✓	✓	#69	X
Associated dial		✓	*67	X
Associated serv.		✓	*83	X
Call waiting	✓	✓	*55	X
Waiting tone off	✓	✓	*87	X
Waiting tone on	✓	✓	#87	X
Call wait.term.on		✓	*490	X
Call wait.trm.off		✓	#490	X
Caller List	✓	✓	#82	X
Save number	✓	✓	*82	X
Changeover on	✓	✓	*66	X
Changeover off	✓	✓	#66	X
Change PIN		✓	*93	
Conference	✓	✓	*3	X
Start conference	✓			
Adding a party to the conference	✓			
End conference	✓	✓	#3	
View conf parties	✓			
Remove party	✓			
Drop last conf. party (only for U.S.)			*491	
Consult	✓			
Return to held call	✓	✓	*0	
Quit and return	✓	✓	*0	
Transfer/US:Accept call UK:Accept	✓			
Control Relay On		✓	*90	X
Control Relay Off		✓	#90	X
US:Directory UK:Phonebook	✓			X
En-bloc sending				
Dial	✓			
DISA				
Internal DISA	✓	✓	*47	X

## Overview of Functions and Codes (Alphabetical)

Functions (display)	... Inter-actively 	... Via the Program/Service menu 		... With function keys
		Program/Service	Code	
DND on	✓	✓	*97	X
DND off	✓	✓	#97	X
Door opener on		✓	*89	X
Door opener off		✓	#89	X
DTMF dialing		✓	*53	X
Forwarding on	✓	✓	*1	X
1=all calls	✓	✓	*11	X
2=external calls only	✓	✓	*12	X
3=internal calls only	✓	✓	*13	X
Forwarding off	✓	✓	#1	X
Trunk forward on	✓	✓	*64	X
Trunk forward off	✓	✓	#64	X
Forward Line: On		✓	*501	X
Forward Line: Off		✓	#501	X
Headset				
Answer call	✓			
HF answerback on	✓	✓	*96	X
HF answerback off	✓	✓	#96	X
Hotline				
Join hunt group	✓	✓	*85	X
Leave hunt group	✓	✓	#85	X
Rejoin all groups	✓	✓	*85*	X
Leave all groups	✓	✓	#85#	X
Lock all phones		✓	*943	X
Monitoring			*944	
Mute on	✓	✓	*52	X
Mute off	✓	✓	#52	X
Night answer on	✓	✓	*44	X
Night answer off	✓	✓	#44	X
Open door		✓	*61	X
Override	✓	✓	*62	X
Page		✓	*45	X
Answer page (not for U.S.)		✓	#45	X
Park a call		✓	*56	X
Retrieve call		✓	#56	
Phone Test		✓	*940	
Pickup - directed		✓	*59	X
Pickup - group	✓	✓	*57	X
Accept call	✓			
Prog. feature key		✓	*91	X

## Overview of Functions and Codes (Alphabetical)

Functions (display)	... Inter-actively 	... Via the Program/Service menu  		... With function keys
		Program/Service	Code	
Redial				X
Reject call Release				X
Relocate Complete Relocate	✓	✓	*9419 #9419	X
Reserve trunk	✓			X
Reset services		✓	#0	X
Retrieve line		✓	*63	X
Ring Transfer: On Ring Transfer: Off		✓ ✓	*502 #502	X X
Ringer cutoff on Ringer cutoff off	✓ ✓	✓ ✓	*98 #98	X X
Ringing group on Ringing group off		✓ ✓	*81 #81	X X
Room monitor		✓	*88	X
Select language		✓	*48	
Send message View sent message US: View messages UK: Display Messages Mailbox	✓ ✓ ✓	✓ ✓ ✓	*68 #68 #68	X X X X
Keypad dialing		✓	*503	
Shift Key				X
Show call charges (own telephone) View call charges (other party's telephone)		✓	*65	X X
Speaker call		✓	*80	X
Suppress call ID Restore caller ID	✓ ✓	✓ ✓	*86 #86	X X
Tel. data service			*42	
Temporary MSN (not for U.S.)	✓	✓	*41	X
Temporary Phone		✓	*508	X
Timed reminder on Timed reminder off		✓ ✓	*46 #46	X X
Toggle/Connect	✓	✓	*2	X
Trace call		✓	*84	X
Transfer	✓			
Trunk Flash		✓	*51	X

## Overview of Functions and Codes (Alphabetical)

Functions (display)	... Inter-actively 	... Via the Program/Service menu 		... With function keys
			Code	
UCD		✓		
Log on		✓	*401	X
Log off		✓	#401	X
Available		✓	*402	X
Not available		✓	#402	X
Work on		✓	*403	X
Work off		✓	#403	X
UCD night on		✓	*404	X
UCD night off		✓	#404	X
Calls in queue		✓	*405	X
US:Callback UK:Set Callback	✓	✓	*58	X
View callbacks/Delete	✓	✓	#58	
Use speed-dialing		✓	*7	X
Change Speed-dial (station)		✓	*92	X



[www.hipath.com](http://www.hipath.com)



© Siemens AG 2003  
Information and Communication Networks  
Hofmannstr. 51 • D-81359 Munich

**Ref. No.: A31003-H1012-C125-1-7619**

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products.

An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

Subject to availability. Right of modification reserved.  
Printed in the Federal Republic of Germany.

13.02.2003